



HOSHIZAKI AMERICA, INC.

SERVICE BULLETIN

SB03-0004

July 22, 2003

Page 1 of 1

Subject: -SSB TEMPGUARD™ DIP SWITCH SETTINGS

The Refrigerator and Freezer in the –SSB line use the same control board. The DIP switches must be set properly to allow the board to work in each individual model. Below is a list of the proper DIP switch settings for each model.

MODEL	DIP SWITCH							
	1	2	3*	4	5	6	7	8
FH1-SSB (HD)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
FH2-SSB (HD)	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RH1-SSB (HD)	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RH2-SSB (HD)	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RH3-SSB (HD)	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF
RH1-SSB-GD	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
RH2-SSB-GD	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
RH3-SSB-GD	ON	ON	OFF	OFF	OFF	OFF	OFF	OFF
PTR1SSB	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
RFH1-SSB	SEE BELOW							
Refrigerator board	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
Freezer board	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
RFH2-SSB	SEE BELOW							
Refrigerator board	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
Freezer board	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
RFH2-SSB	SEE BELOW							
Refrigerator board	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
Freezer board	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF

*Note: Dip switch number 3 will be “OFF” when **square** door light switch part number 3A1386-01 or 3A1826-01 is used (Newer style). DIP switch number 3 will be “ON” if **round** door light switch part number 4A0487-01 (Older style).