



HOSHIZAKI AMERICA, INC.

SERVICE BULLETIN

SB11-0004

September, 23 2011

Page 1 of 2

SUBJECT: MECHANICAL BIN CONTROL LOCATION CHANGE

Beginning in August 2011 the Mechanical Bin Control on the KM-320M_H, KM-515M_H, KM-600M_H and the KM-650M_H will no longer be mounted directly to the unit. The assembly will be shipped located in the compressor compartment, wrapped in shipping material.

During the unit's installation process, it will be necessary to install the assembly following the attached instructions. These instructions are also included in the instruction manual that is shipped with the unit.

There are two mounting positions available. The lower position is used specifically for mounting these units to the Coca-Cola Freestyle® dispenser. In some cases it may also be used if the customer prefers or if the particular application requires a lower bin level.

If you have any questions on this process please call Technical Support at 1-800-233-1940.

KM Bin Control Installation Instructions
For Use with the Following Hoshizaki Ice makers:
KM-320M_H, KM-515M_H, KM-600M_H, KM-650M_H

⚠ WARNING

- The icemaker should be installed only by qualified service personnel to reduce the risk of death, electric shock, serious injury, or fire.
- Turn off the power supply, and place the icemaker disconnect (if applicable) in the off position. Lockout/Tagout to prevent the power supply from being turned back on inadvertently.
- Failure to install the bin control within these guidelines may adversely affect safety, performance, component life, and warranty coverage.

Installation Instructions

- 1) If not already off, turn off the power supply and place the icemaker disconnect (if applicable) in the off position. Lockout/Tagout to prevent the power supply from being turned back on inadvertently.
- 2) Remove the front panel and place the control switch in the "OFF" position. See Fig. 1.
- 3) Remove the top panel and the base cover.
- 4) Remove the bin control assembly from the compressor compartment.
- 5) Remove the 2 thumbscrews securing the bin control to the bin control mount. Remove the bin control from the bin control mount. See Fig. 2.

Note: When used with a Coca-Cola Freestyle® Dispenser, remove the 2 thumbscrews securing the bin control mount to the extension bracket. Reattach the bin control mount using the top holes of the bin control mount and the lower holes of the extension bracket. See Fig. 3.

