



# **HOSHIZAKI AMERICA, INC.**

## **SERVICE BULLETIN**

**SB13-0009**

**September 24, 2013**

**Page 1 of 2**

### **Subject: Condenser Leg Change**

Legs are included with all URC condensers. Although they are not always used, they are included with the URC condenser and are provided to raise the condenser off the rooftop for better air flow in warmer climates and to reduce the potential for blockage from snow in colder climates. The previous legs have been 2 welded leg assemblies. A new knock down leg has been designed for ease of manufacturing and packaging. The legs on the URC condensers are changing to the new knock down design beginning with the following URC models: URC-22F and URC-23F. This change is designated by an auxiliary code change to C1 and all subsequent production.

This leg change will be implemented on all additional URC condensers as the schedule allows. Note that any URC condenser with a serial beginning with C1 and all subsequent production will have the new leg design.

The following installation instruction sheet is included in the condenser and will be incorporated in the remote ice maker instruction manual in the future. Review the following instructions with installers so that they can properly install the legs in the future.

### Hoshizaki URC Remote Condenser Unit Leg Installation Instructions

Check to ensure that the following parts are included:


Index No.	Description	Part Number	Qty
1	Leg	3A7823-01	4
1a	Bolt with Split Lock Washer and Flat Washer; 8×16, SS	7B0230816	10
1b	Nut; M8, SS	7N12-0800	10
2	Plate	3A3872-01	2

#### **⚠ WARNING**

- The icemaker and condenser unit should be installed only by qualified and EPA-certified service personnel to reduce the risk of death, electric shock, serious injury, or fire.
- See the instruction manual included with the Hoshizaki icemaker for installation instructions and safety information not covered in this instruction sheet. This instruction sheet covers installation of remote condenser unit legs only.
- Failure to install, operate, and maintain the appliance in accordance with these instructions and the icemaker instruction manual will adversely affect safety, performance, component life, and warranty coverage.
- Proper installation is the responsibility of the installer. Product failure or property damage due to improper installation is not covered under warranty.
- The icemaker and condenser unit must be installed in accordance with applicable national, state, and local codes and regulations.
- Make sure power is off to all components. Lockout/Tagout to prevent the power supply from being turned back on inadvertently.

#### **Remote Condenser Unit Leg Installation Instructions**

- 1) Assemble 2 sets of legs using the legs, bolts, and nuts provided. See the figure below.
- 2) Position a plate between a set of legs and the remote condenser unit, then secure the legs to the remote condenser unit with the bolts and nuts provided. Repeat on the other side with the remaining set of legs.
- 3) The bottom of each leg has a mounting hole. Secure the legs to the permanent site with 4 bolts (not included).

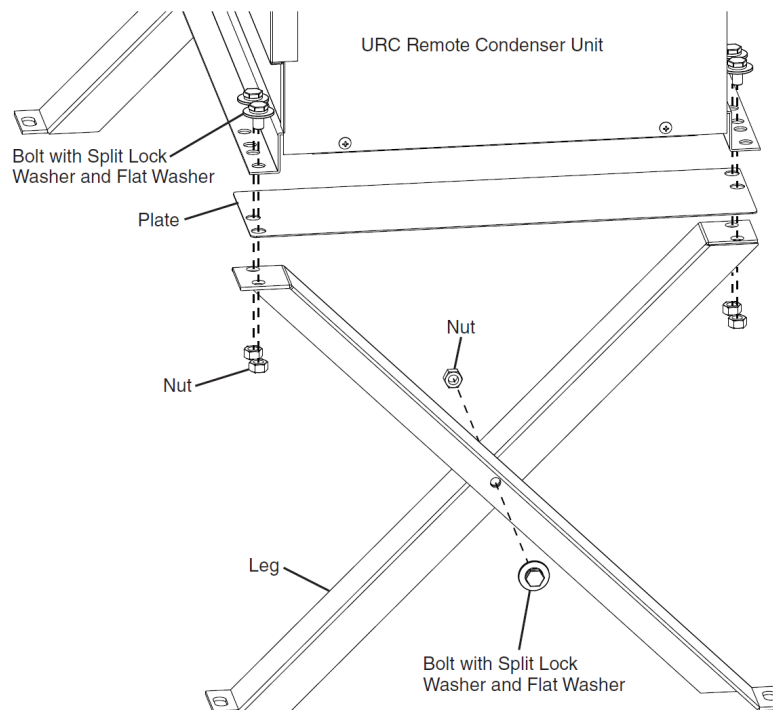

4A5651-010

If you have any questions regarding this information please contact the Technical Support department at: 1-800-233-1940.