



HOSHIZAKI AMERICA, INC.

SERVICE BULLETIN

SB97-0007

August 26, 1997

Page 1 of 3

Subject: Water Supply Pipe Parts Update

Over the production period for the KM crescent cuber we have had several changes in the water supply pipe that connects the incoming water line to the inlet water valve. Each change produced a new part number. Some parts books in the field may not be the latest version. The purpose of this bulletin is to provide you with the correct part numbers to use when ordering service replacement parts.


There have been several substitute numbers which could cause confusion when ordering parts. The following lists provide you with the final part number by model and serial code for this part. Use this number when placing your order.

SERIES/MODEL	DESCRIPTION	PART #	SERIAL CODE	(LETTER & FIRST DIGIT)
KM-250MAE,MWE	WATER SUPPLY PIPE	HS-026	C-1>>>	E-0
		4A0768G02		E-1>>
KM-500 MAE,MWE,MRE	"	HS-028	C-1>>>	E-0
		4A0768G04		E-1>>
KM-630 MAE,MWE,MRE	"	4A0156G01	C-1	
		HS-028	C-2>>>	E-0
		4A0768G04		E-1>>
KM-800 MAE,MWE,MRE	"	4A0156G01	C-1	
		HS-028	C-2>>>	E-0
		4A0768G04		E-1>>
KM-800MRE-FM	"	3A0424G01	E-1>>	
KM-1200 MAE,MWE,MRE	"	4A0156G01	C-0	
		HS-025	C-1>>>	E-0
		4A0768G01		E-1>>
KM-1200MRE-FM	"	3A0424G01	E-1>>	

SERIES/MODEL	DESCRIPTION	PART #	SERIAL CODE	(LETTER & FIRST DIGIT)
KM-1200 SAE,SWE,SRE/60	WATER SUPPLY PIPE	4A0156G01	B-1>>>	C-0
	"	HS-025		C-1>>> E-0
	"	4A0768G01		E-1>>
KM-1200 SAE,SWE,SRE/50	"	HS-025	D-1	
	"	4A0768G01	E-1>>	
KM-1600 MWE,MRE1/3	"	HS-025	D-1	
	"	4A0768G01	E-1>>	
KM-1600 SWE,SRE1/3	"	HS-025	C-1>>>	E-0
	"	4A0768G01	E-1>>	
KM-2000 SWE3,SRE3	"	HS-027	C-1>>>	E-0
	"	4A0768G03	E-1>>	
SERIES/MODEL	DESCRIPTION	PART #	SERIAL CODE	(LETTER & FIRST DIGIT)
KM-250BAB,BWB	WATER SUPPLY PIPE	HS-014	K-1>>>	B-1
KM-250MAB,MWB	"	438739G01	A-1	
	"	4A0156G02	B-1>>>	C-0
	"	HS-026		C-1>>> D-0
KM-450 MAB,MWB,MRB	"	4A0156G01	K-1>>>	C-2
	"	HS-028		C-3>>> C-4
KM-630 MAB,MWB,MRB	"	433519G01	J-1	
	"	4A0156G01	J-2>>>	B-1
KM-800MAB	"	433519G01	J-1	
	"	4A0156G01	J-2>>>	B-1
KM-800MWB,,MRB	"	433519G01	J-1>>>	J-2
	"	4A0156G01		J-3>>> B-1

SERIES/MODEL	DESCRIPTION	PART #	SERIAL CODE	(LETTER & FIRST DIGIT)
KM-1200 MAB,MWB,MRB	WATER SUPPLY PIPE	435094G01	J-1>>>	K-1
	"	4A0156G01		K-2>>> C-0
KM-1200 SAB,SWB,SRB	"	436670G01	K-1>>>	B-1
	"	4A0156G01		B-2
KM-1600MWB 1/3	"	4A0156G01	A-1>>>	B-1
	"	HS-025		D-1>>> D-2
KM-1600MRB 1/3	"	4A0156G01	A-1>>>	D-0
KM-1600SWB 1/3	"	4A0156G01	A-1>>>	C-0
	"	HS-025		C-1>>> D-0
KM1600SRB 1	"	4A0156G01	A-1>>>	C-1
	"	HS-025		C-2>>> D-0
KM-1600SRB 3	"	4A0156G01	A-1>>>	C-0
	"	HS-025		C-1>>> D-0
KM-2000SWB 3	"	4A0156G03	A-1>>>	C-0
	"	HS-027		C-1>>> D-0
KM-2000SRB 3	"	4A0156G03	A-1>>>	B-1
	"	HS-027		C-0>>> C-1
KM-2400SRB 3	"	4A0156G03	B-1>>>	C-0
	"	HS-027		C-1>>> E-0

Note: The first letter of the serial code rotates through the following letter sequence yearly. At the end of "K" it starts over at "A" again. Notice "I" is not used.

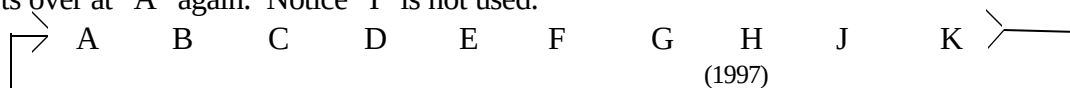

EXAMPLE: K1>>> B1 includes K-1, K-2..., A-O, A-1..., B-0, B-1....