



HOSHIZAKI

Parts List

Modular Crescent Cuber

Models

KM-930MAK2

KM-1130MAK2



hoshizakiamerica.com

Number: 71469
Issued: 5-11-2026

CONTENTS

Auxiliary Codes.....	3
Note About Ordering Parts	3
A. Main Assembly & Refrigeration Circuit	4
KM-930MAK2	4
KM-1130MAK2	6
B. Water Circuit	8
C. Control Box Assembly	11
KM-930MAK2	11
KM-1130MAK2	12
D. Accessories & Labels	14

Auxiliary Codes

KM-930MAK2

Q-0 October 2025

R-0 January 2026

KM-1130MAK2

R-0 January 2026

R-1 April 2026


Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

A. Main Assembly & Refrigeration Circuit **KM-930MAK2** Q-0, R-0

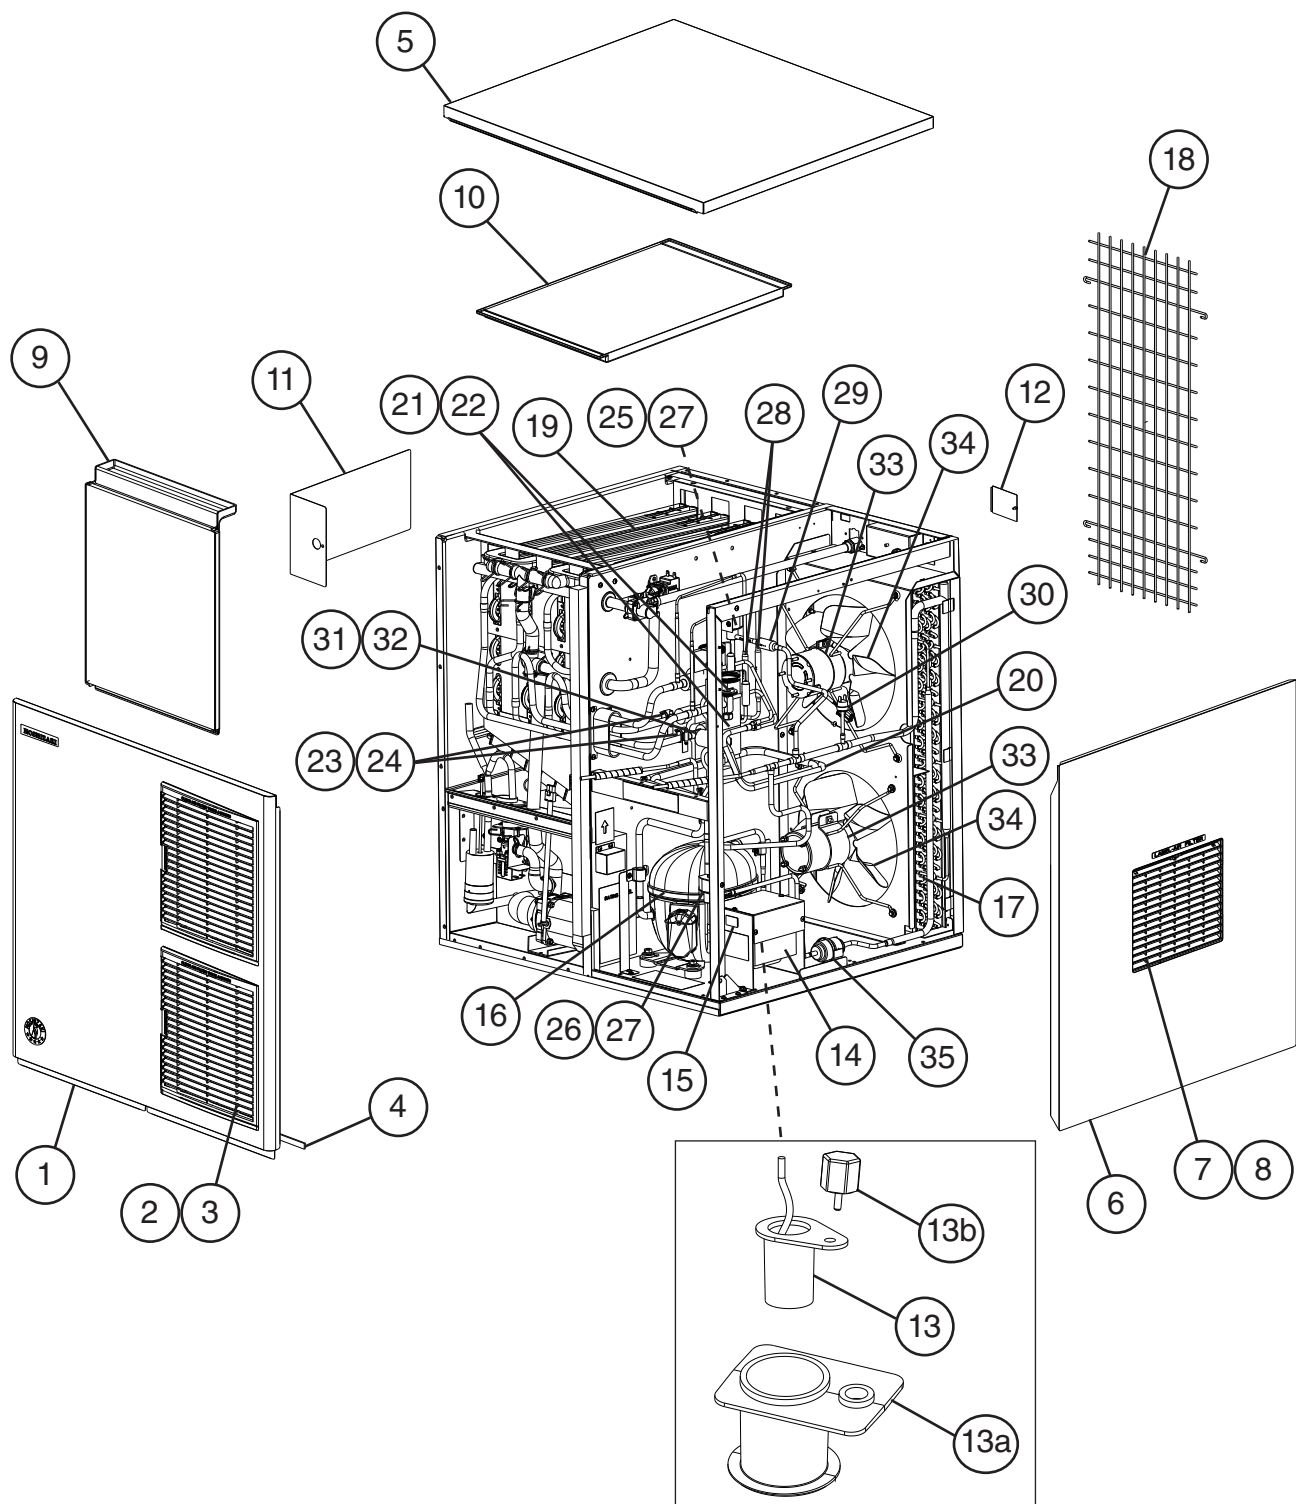


Title: A. Main Assembly & Refrigeration Circuit Model: KM-930MAK2												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0 R-0								
Main Assembly												
1	Front Panel Assembly (includes items 2 and 3 and items 1 and 2 from "D. Accessories and Labels,")		1A8385A01	1								
2	Louver Assembly		2A6649A01	2								
3	Air Filter		2A2062G01	2								
4	Gasket	L=762 mm	4A0808L02	1								
5	Top Panel Assembly		3A1941A01	1								
6	Right Side Panel Assembly (includes items 7 and 8)		1A8413A01	1								
7	Louver		103344-07	1								
8	Air Filter		208840G03	1								
9	Front Insulation		3A8392G01	1								
10	Top Insulation		322714G01	1								
11	Control Box Cover		3B1942-01	1								
12	Junction Box Cover		433410-01	1								
13	Ultrasonic Bin Control		4A6148G01	1								
13a	Ultrasonic Sensor Holder		4A7597-02	1								
13b	Screw		415944912	1								
14	Main Transformer		4A5695-01	1								
15	Voltage Tap Switch		4A1477-01	1								
Refrigeration Circuit												
16	Compressor		4A7809-01	1								
17	Condenser		2B1659-01	1								
18	Condenser Cover		3B2296-01	1								
19	Evaporator		1A3820G01	1								
20	Heat Exchanger		1A8313G01	1								
21	Thermal Expansion Valve		4A7497-06	2								
22	Thermal Expansion Valve Cover		4A7233-01	2								
23	Thermal Expansion Valve Bulb Holder		4A7659-02	2								
24	Clamp		4A7759-01	2								
25	Hot Gas Valve Body		4A3978-01	1								
26	Liquid Line Valve Body		4A3276-01	1								
27	Valve Coil (Bolt included)		4A3277-01	2								
28	Check Valve		4A1373-01	2								
29	Strainer		441569-04	1								
30	High-Pressure Switch		4A6039-01	1								
31	Thermistor	SP-5672	429006-03	1								
32	Thermistor Holder		427430-01	1								
33	Fan Motor		4A3158-01	2								
34	Fan Blade		4A3959-01	2								
35	Drier		4A1113-01	1								

A. Main Assembly & Refrigeration Circuit **KM-1130MAK2** R-0, R-1

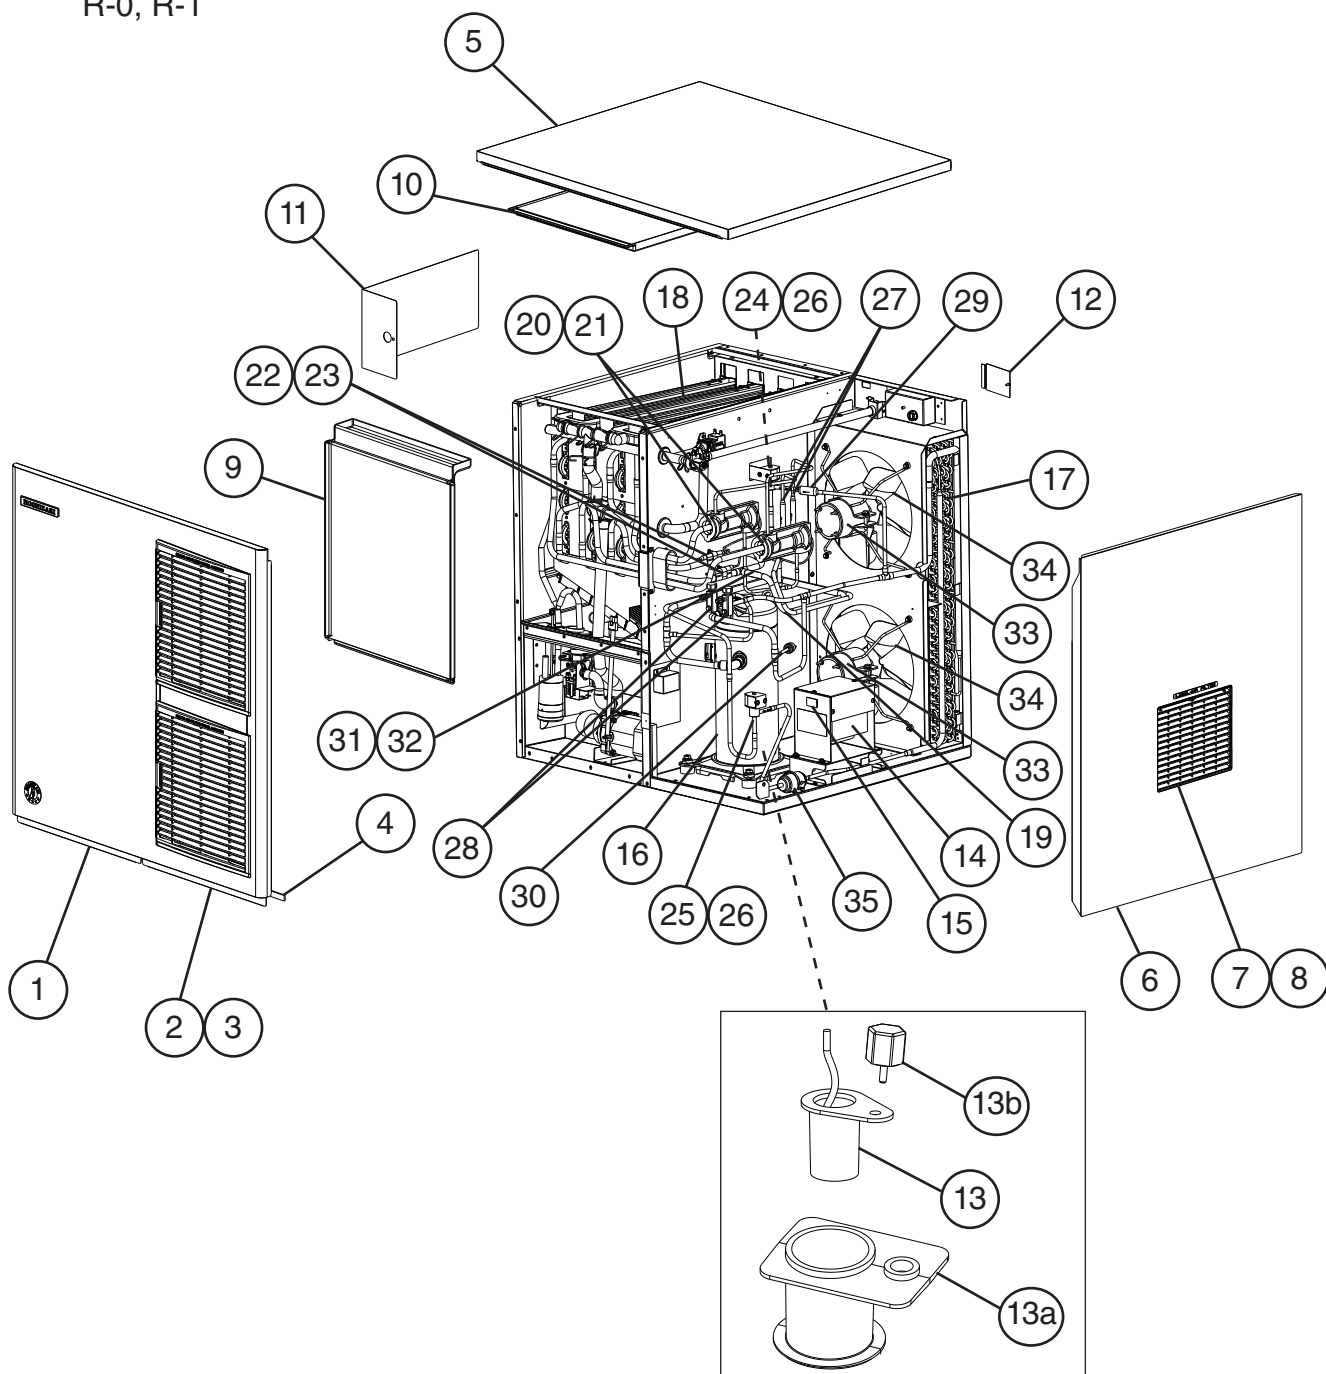


Title: A. Main Assembly & Refrigeration Circuit Model: KM-1130MAK2													
Index No.	Description	Material or Model Number	Part Number	Required Number									
				R-0									
Main Assembly													
1	Front Panel Assembly (includes items 2 and 3 and items 1 and 2 from "D. Accessories and Labels,")		1A6367A02	1									
2	Louver Assembly		2A6649A01	1									
3	Air Filter		2A2062G01	2									
4	Gasket	L=762 mm	4A0808L02	1									
5	Top Panel Assembly		3A1941A01	1									
6	Right Side Panel (includes items 7 and 8)		1A8544G01	1									
7	Louver Assembly		2A6649A01	1									
8	Air Filter		2A2062G01	1									
9	Front Insulation		3A8392G01	1									
10	Top Insulation		322714G01	1									
11	Control Box Cover		3B1942-01	1									
12	Junction Box Cover		433410-01	1									
13	Ultrasonic Bin Control		4A6148G01	1									
13a	Ultrasonic Sensor Holder		4A7597-02	1									
13b	Screw		415944912	1									
14	Main Transformer		4A5695-01	1									
15	Voltage Tap Switch		4A1477-01	1									
Refrigeration Circuit													
16	Compressor		4A7641-01	1									
17	Condenser		3B2546-01	1									
18	Evaporator		1A3820G01	1									
19	Heat Exchanger		1A8539G01	1									
20	Thermostatic Expansion Valve		4A7676-02	2									
21	Thermostatic Expansion Valve Cover		3A0944-01	2									
22	Thermostatic Expansion Valve Bulb Holder		3A0107-01	2									
23	Clamp		443461-02	2									
24	Hot Gas Valve Body		4A3978-01	1									
25	Liquid Line Valve Body		4A3276-01	1									
26	Valve Coil (Bolt included)		4A3277-01	2									
27	Check Valve		4A1373-01	2									
28	Service Valve		4A3420-01	2									
29	Strainer		441569-04	1									
30	High-Pressure Switch		463180-04	1									
31	Thermistor	SP-5672	429006-03	1									
32	Thermistor Holder		427430-01	1									
33	Fan Motor		4A7957-03	2									
34	Fan Blade		4A3959-01	2									
35	Drier		4A1113-01	1									

B. Water Circuit
KM-930MAK2, KM-1130MAK2
 Q-0, R-1

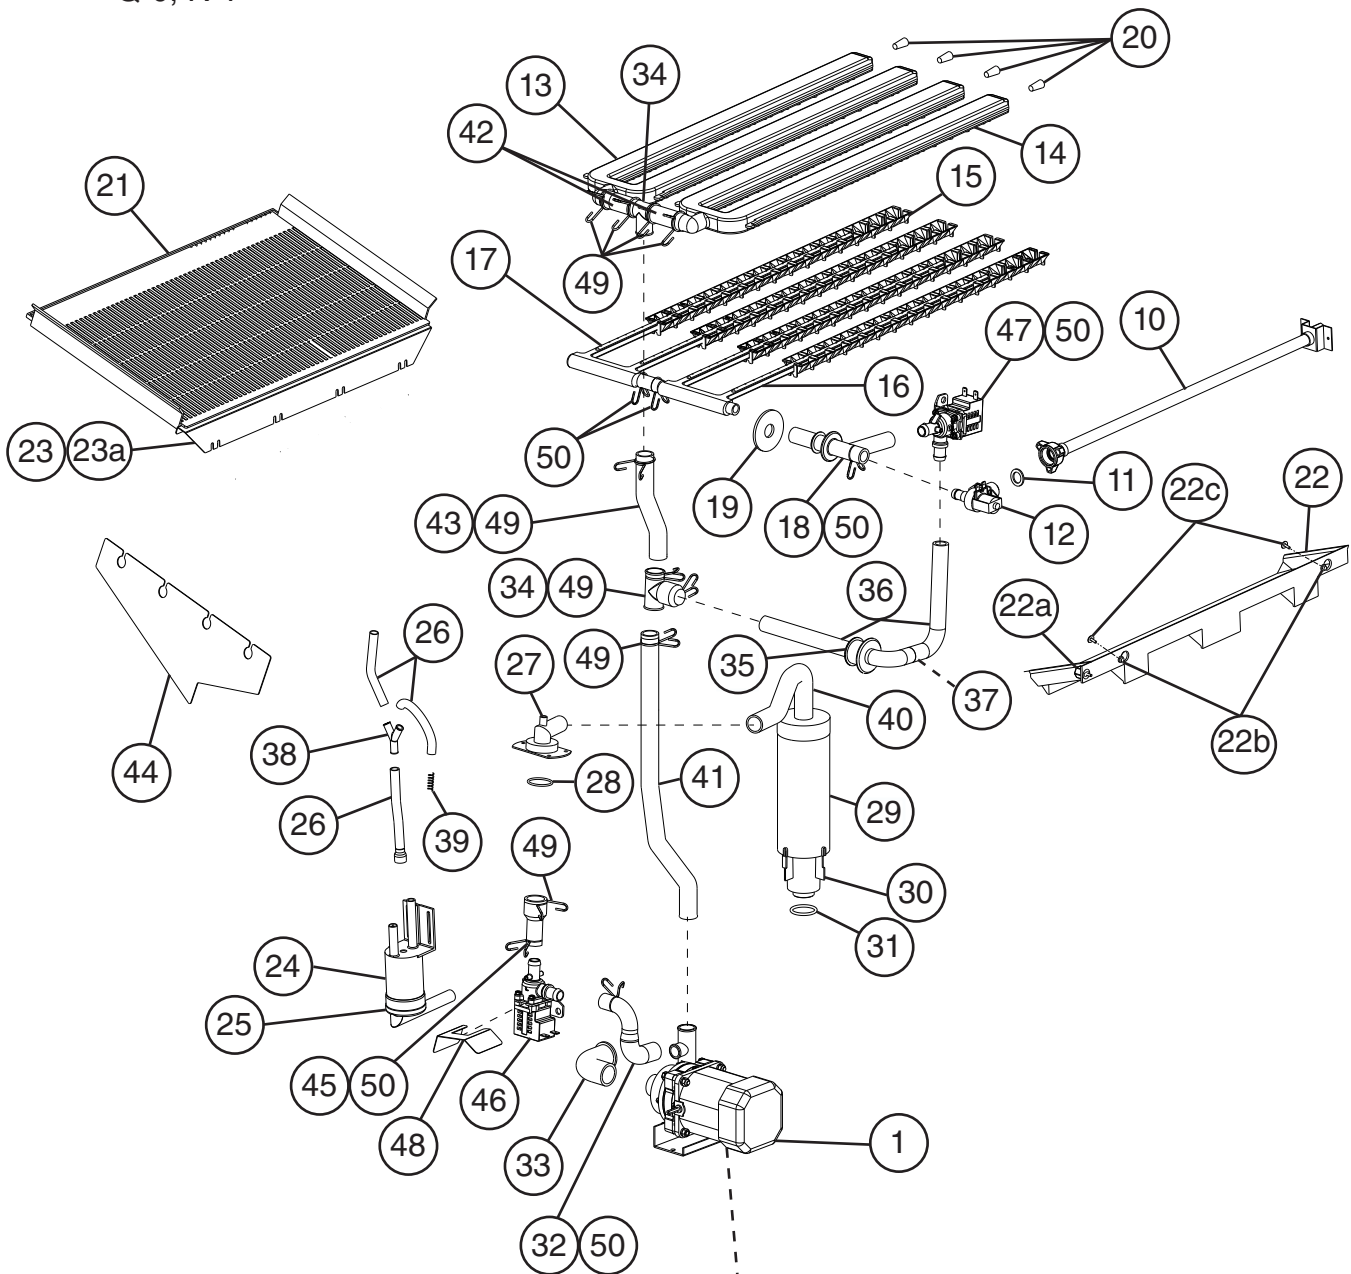

Pump Motor Assembly

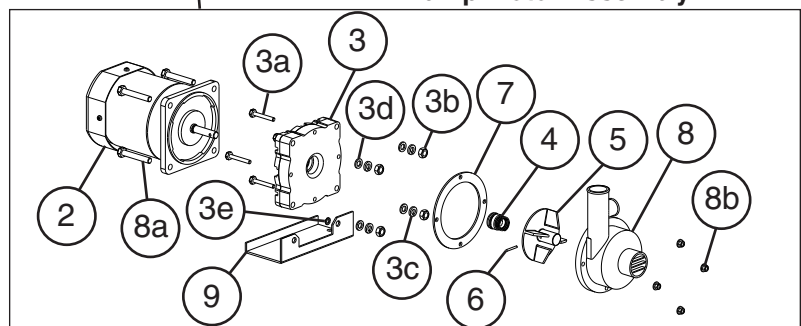


Title: B. Water Circuit Model: KM-930MAK2_1130MAK2


Index No.	Description	Material or Model Number	Part Number	Required Number							
				Q-0 R-1							
1	Pump Motor Assembly (includes items 2 through 9)		2B0399A01	1							
2	Pump Motor		4A7462-01	1							
3	Pump Flange		215662-01	1							
3a	Hex Bolt	4x30	7B02-0430	4							
3b	Hex Nut		7N12-0600	4							
3c	Split Lock Washer		7L22-0600	4							
3d	Flat Washer		7W22-0600	4							
3e	Tooth Washer		7R22-0600	2							
4	Mechanical Seal		4A3820-03	1							
5	Impeller		428548-01	1							
6	Pin		4A0648-01	1							
7	Packing		428547-01	1							
8	Pump Housing		2A2762-01	1							
8a	Hex Bolt	6x40	7B02-0640	4							
8b	Hex Flange Nut		7J02-0400	4							
9	Pump Motor Bracket		435057-01	1							
10	Water Supply Pipe		4A5216G04	1							
11	Rubber Gasket		413854-03	1							
12	Inlet Water Valve	KM-930MAK2	3U0111-01	1							
		KM-1130MAK2	3B1433-07	1							
13	Left Spray Tube		1A0260-02	1							
14	Right Spray Tube		1A0260-01	1							
15	Spray Guide		2A4282-02	4							
16	Right Water Supply Tube		2A0079-02	1							
17	Left Water Supply Tube		2A0079-01	1							
18	Distributor A (Tee)		3A9429-01	1							
19	Flange		439267-01	1							
20	Plug		4A0176-01	4							
21	Cube Guide A		214905-01	1							
22	Cube Guide B		322644-02	1							
22a	Thumbscrew		415949G12	1							
22b	Collar		435269-01	2							
22c	Screw	4x12	7C22-0412	2							
23	Plate		3B0973-01	1							
23a	T2 Screw	4x10	7P32-0410	4							
24	Float Switch Assembly		4A7077G02	1							
25	Float Switch Connector		426799-01	1							
26	Silicone Hose	L=135 mm (each)	7730I3812	2							
27	Drain Valve Housing		3A1170-01	1							
28	O-Ring		7611-G035	1							
29	Overflow Cap		322816-01	1							
30	Overflow Pipe		322691-02	1							
31	O-Ring		7611-G035	1							
32	Drain Hose		3B1457-01	1							
33	Inlet Hose A		435091-01	1							
34	Distributor B (Tee)		432426-01	2							
35	Rubber Ring		439236-01	1							

Title: B. Water Circuit Model: KM-930MAK2_1130MAK2												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0 R-1								
36	3-Piece Bypass Hose Assembly (includes item 37)		3B1376G01	1								
37	Joint Pipe		4A6286-01	1								
38	Connector		432763-01	1								
39	Spring		435825-01	1								
40	Distributor Hose (C)		326655-01	1								
41	Vinyl Hose	L=715 mm	7716B2025	1								
42	Vinyl Hose	L=63 mm	7716B2025	2								
43	Vinyl Hose	L=48 mm	7730-1519	1								
44	Splash Guard		4A6118-01	1								
45	Drain Hose B		3B1462-01	1								
46	Drain Valve		4A5745-07	1								
47	Cleaning Valve		4A5745-06	1								
48	Drain Valve Terminal Cover		3B1856-02	1								
Hose Clamps												
49	Hose Clamp	25 mm	427443-03	9								
50	Hose Clamp	18 mm	427443-05	6								

C. Control Box Assembly
KM-930MAK2
1/2
Q-0, R-0

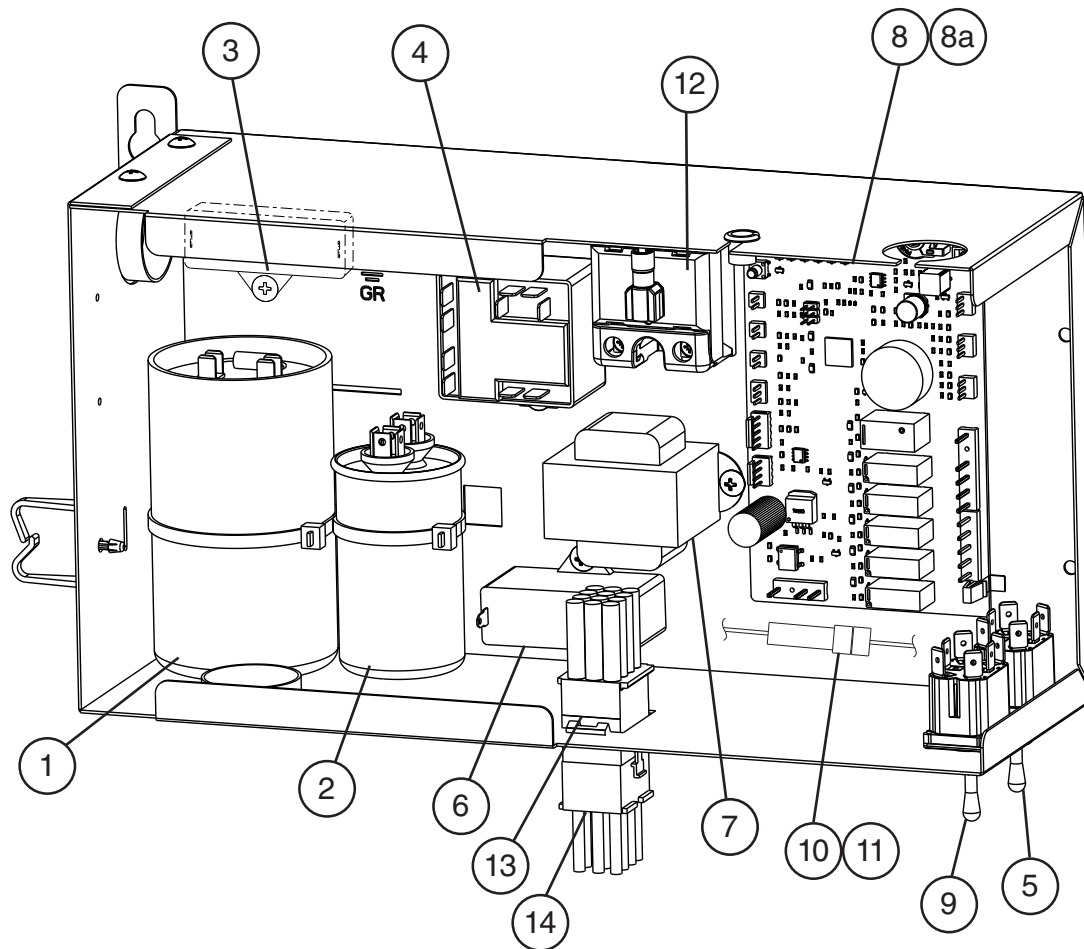

C. Control Box Assembly
KM-1130MAK2
2/2
R-0, R-1

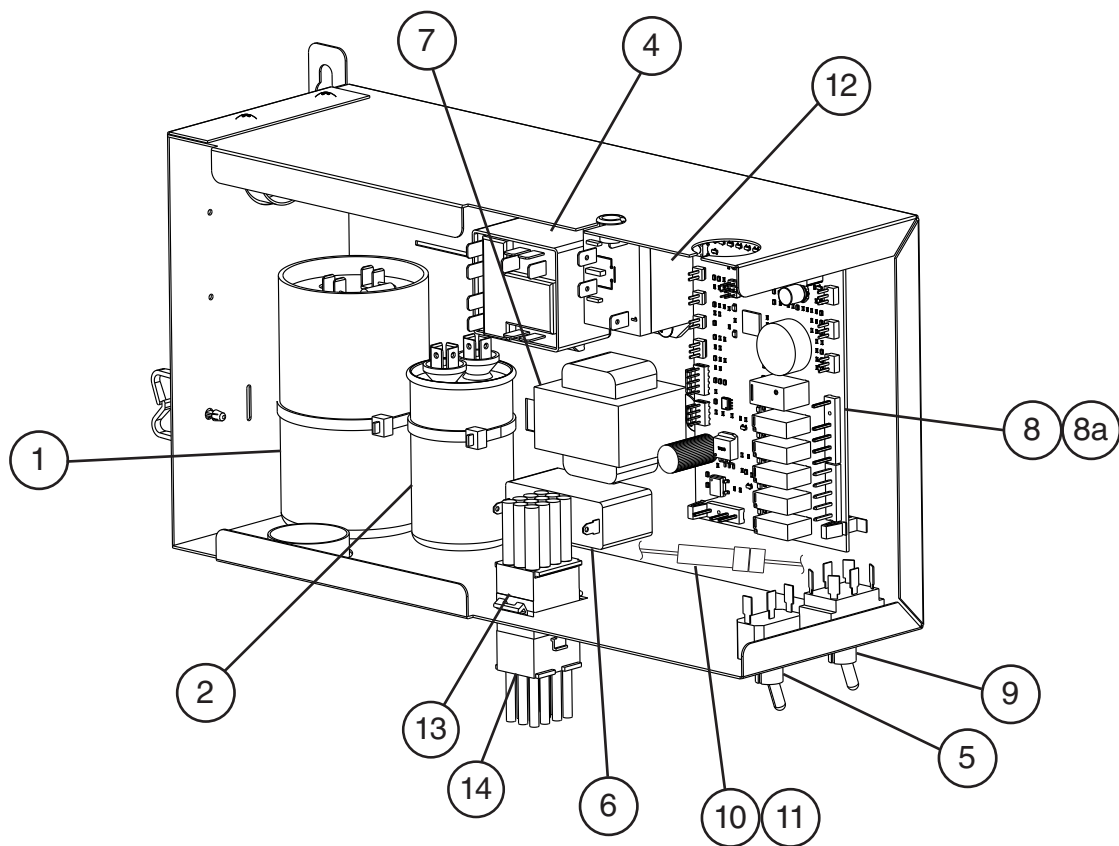


Title: C. Control Box Assembly Model: KM-930MAK2_1130MAK2												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0								
1	Start Capacitor	KM-930MAK2	3A0076-22	1								
		KM-1130MAK2	3A0076-07	1								
2	Run Capacitor	20MFD, 440VAC KM-930MAK2	3A2005-01	1								
		35MFD, 370VAC KM-1130MAK2	3A2005-05	1								
3	Run Capacitor	5MFD, 250VAC KM-930MAK2	4A6435-02	1								
4	Start Relay	KM-930MAK2	4A7587-02	1								
		KM-1130MAK2	4A1107-20	1								
5	Control Switch	KM-930MAK2	4A7449-04	1								
		KM-1130MAK2	4A0985-01	1								
6	Pump Motor Capacitor	15MFD, 240VAC	439705-01	1								
7	Control Transformer		3A0172-01	1								
8	Control Board		2A9678-03	1								
8a	Control Board Support		4A0336-03	4								
9	Mode Switch	KM-930MAK2	4A7449-01	1								
		KM-1130MAK2	4A6232-01	1								
10	In-Line Fuse Holder (includes item 11)		4A6950-01	1								
11	Fuse	AGC-10, 250VAC, 10A	4A0893-07	1								
12	Compressor Relay	KM-930MAK2	4A7681-02	1								
		KM-1130MAK2	4A3140-01	1								
13	Inside Wire Harness (A) (includes item 10)		1A7314-01	1								
14	Outside Wire Harness (B)		1A7316-01	1								
15	Noise Killer Capacitor (not shown)	0.1MFD, 250VAC KM-1130MAK2	4A6495-01	1								

D. Accessories & Labels

KM-930MAK2_1130MAK2

Q-0, R-1

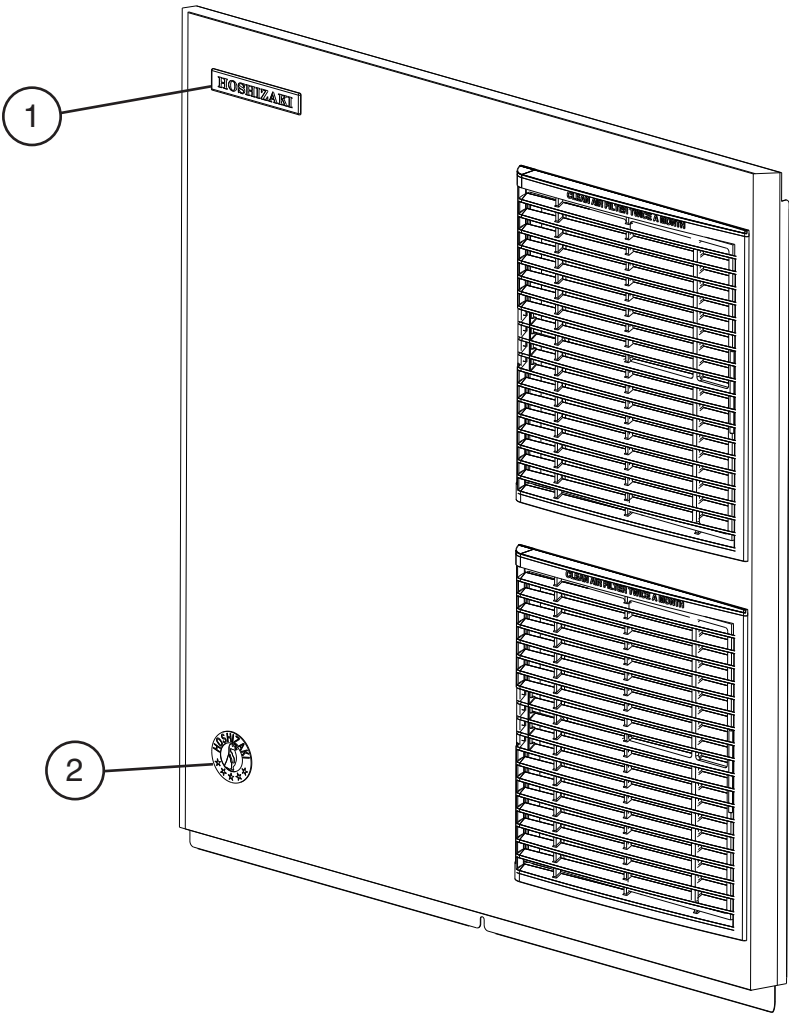

Title: D. Accessories & Labels Model: KM-930MAK2_1130MAK2												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0								
1	Hoshizaki Emblem Label		4A0560-01	R-1	1							
2	Penguin Label		475552L02	R-1	1							
3	Universal Brace		4A0363-01	R-1	2							
3a	Hex Head Bolt		7B02-0512	R-1	2							