



HOSHIZAKI

Parts List

Modular Flaker

Models

F-1530MAK2(-C)(-SC)

F-1530MWK2(-C)(-SC)

F-1530MRKZ2(-C)(-SC)

F-2030MWK2

F-2030MRKZ2(3)(-C)

F-2030MLKZ



CONTENTS

Note About Ordering Parts	4
A. Main Assembly & Refrigeration Circuit	5
F-1530MAK2(-C)(-SC).....	5
F-1530MWK2(-C)(-SC).....	7
F-2030MWK2	8
F-1530MRKZ2(-C)(-SC)	10
F-2030MRKZ3(-C)(-SC)	11
F-2030MLKZ	14
B. Icemaking Unit	16
C. Water Circuit	18
D. Control Box Assembly.....	20
E. Accessories & Labels	22

Auxiliary Codes

F-1530MAK2

TBD

F-1530MAK2-C

Q-0 October 2025

R-0 June 2026

F-1530MAK2-SC

TBD

F-1530MWK2

TBD

F-1530MWK2-C

R-0 January 2026

F-1530MWK2-SC

TBD

F-1530MRKZ2

TBD

F-1530MRKZ2-C

Q-0 July 2025

F-1530MRKZ2-SC

TBD

F-2030MWK2

Q-0 November 2025

F-2030MRKZ2

TBD

F-2030MRKZ2-C

TBD

F-2030MRKZ3

TBD

F-2030MLKZ

TBD


Auxiliary Code Breakdown

The auxiliary code is the first two characters in the serial number. The first character indicates the year. Years progress or regress in alphabetical order. The series runs from "A" through "V" and the letters "I" and "O" are skipped. The second character indicates significant part changes within a year. Base is "0" and this number advances for each change. In cases where there is a letter in parentheses, this designates the month. This is the last character in the serial number. The series runs from "(A)" through "(M)" and the letter "(I)" is skipped. This designation is only included when identifying a parts change within an auxiliary code.

Note About Ordering Parts


Most assemblies cannot be ordered as complete units; parts in the assemblies generally must be ordered separately.

A. Main Assembly & Refrigeration Circuit **F-1530MAK2(-C)(-SC)** Q-0

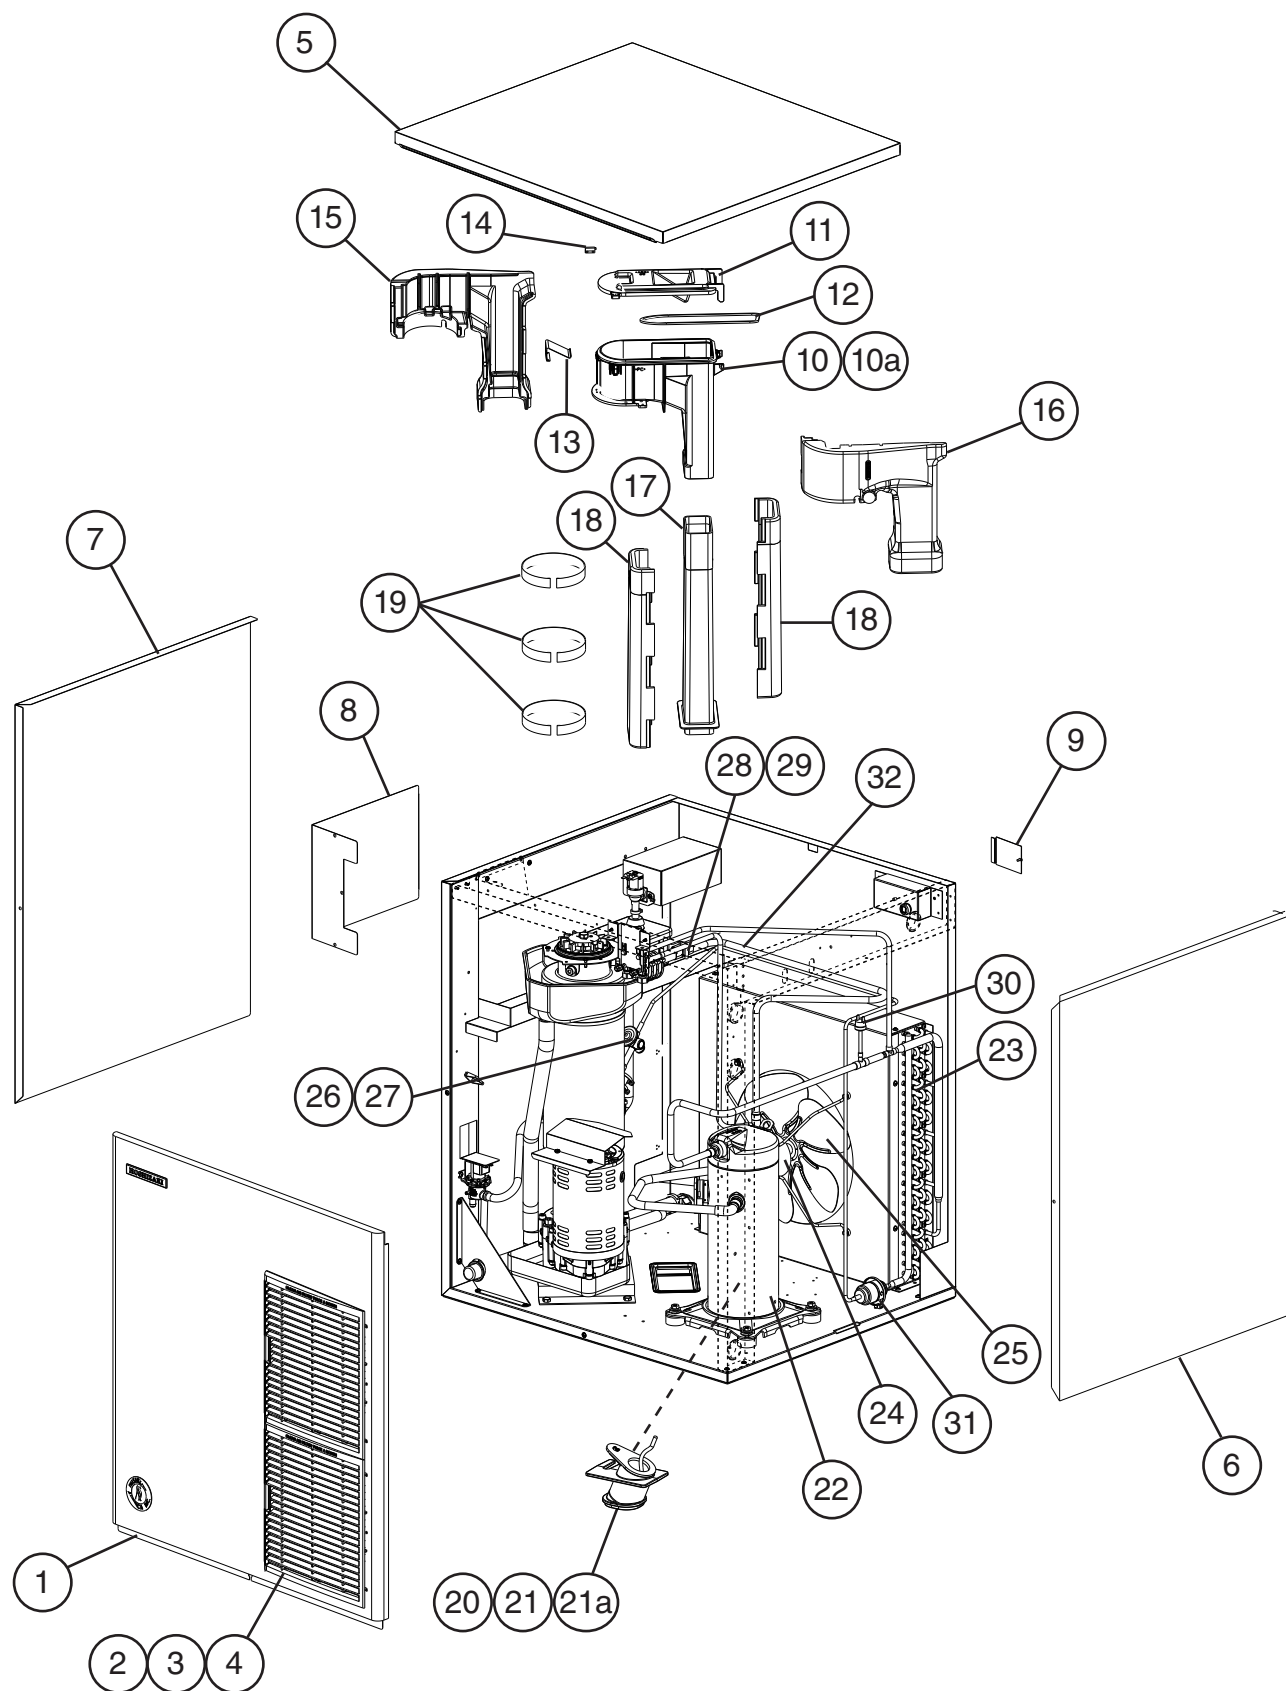


Title: A. Main Assembly & Refrigeration Circuit Model: 1530MAK2(-C)(-SC)													
Index No.	Description	Material or Model Number	Part Number	Required Number									
				Q-0									
Main Assembly													
1	Front Panel Assembly (includes item 2)		1A6869A01	1									
2	Louver Assembly (includes items 3 and 4)		2A6649A01	2									
3	Louver		1A0547-01	2									
4	Air Filter		2A2062G01	2									
5	Top Panel		2A8088-01	1									
6	Right Side Panel		2A2077G01	1									
7	Left Side Panel		2A2076G01	1									
8	Control Box Cover		3B1324-01	1									
9	Junction Box Cover		433410-01	1									
10	Spout		122383P01	1									
10a	Truss Head Screw		7C32-0416	3									
11	Spout Cover		263888G01	1									
12	Gasket		421595-03	1									
13	Spout Spring		478013M01	1									
14	Bin Control Proximity Switch		P02940-01	1									
15	Spout Insulation A		3A9762-01	1									
16	Spout Insulation B		3A9763-01	1									
17	Chute		263897P02	1									
18	Chute Insulation		3B0065-01	2									
19	Insulation Strap (Tie)		436531G01	3									
20	Ultrasonic Bin Control		4A6148G01	1									
21	Ultrasonic Bin Control Housing		1A6270-01	1									
21a	Thumbscrew		415949G10	1									
Refrigeration Circuit													
22	Compressor		4A7643-01	1									
23	Condenser		1A8344-01	1									
24	Fan Motor		4A7957-03	1									
25	Fan Blade		4A0197-01	1									
26	Thermostatic Expansion Valve		4A7589-01	1									
27	Thermostatic Expansion Valve Cover		4A7679-01	1									
28	Thermostatic Expansion Valve Bulb Holder		3A0112-01	1									
29	Clamp		443461-01	1									
30	High-Pressure Switch		4A7070-04	1									
31	Drier		4A1113-01	1									
32	Heat Exchanger		3B2103G01	1									

A. Main Assembly & Refrigeration Circuit
F-1530MWK2(-C)(-SC)
 1/2
 R-0

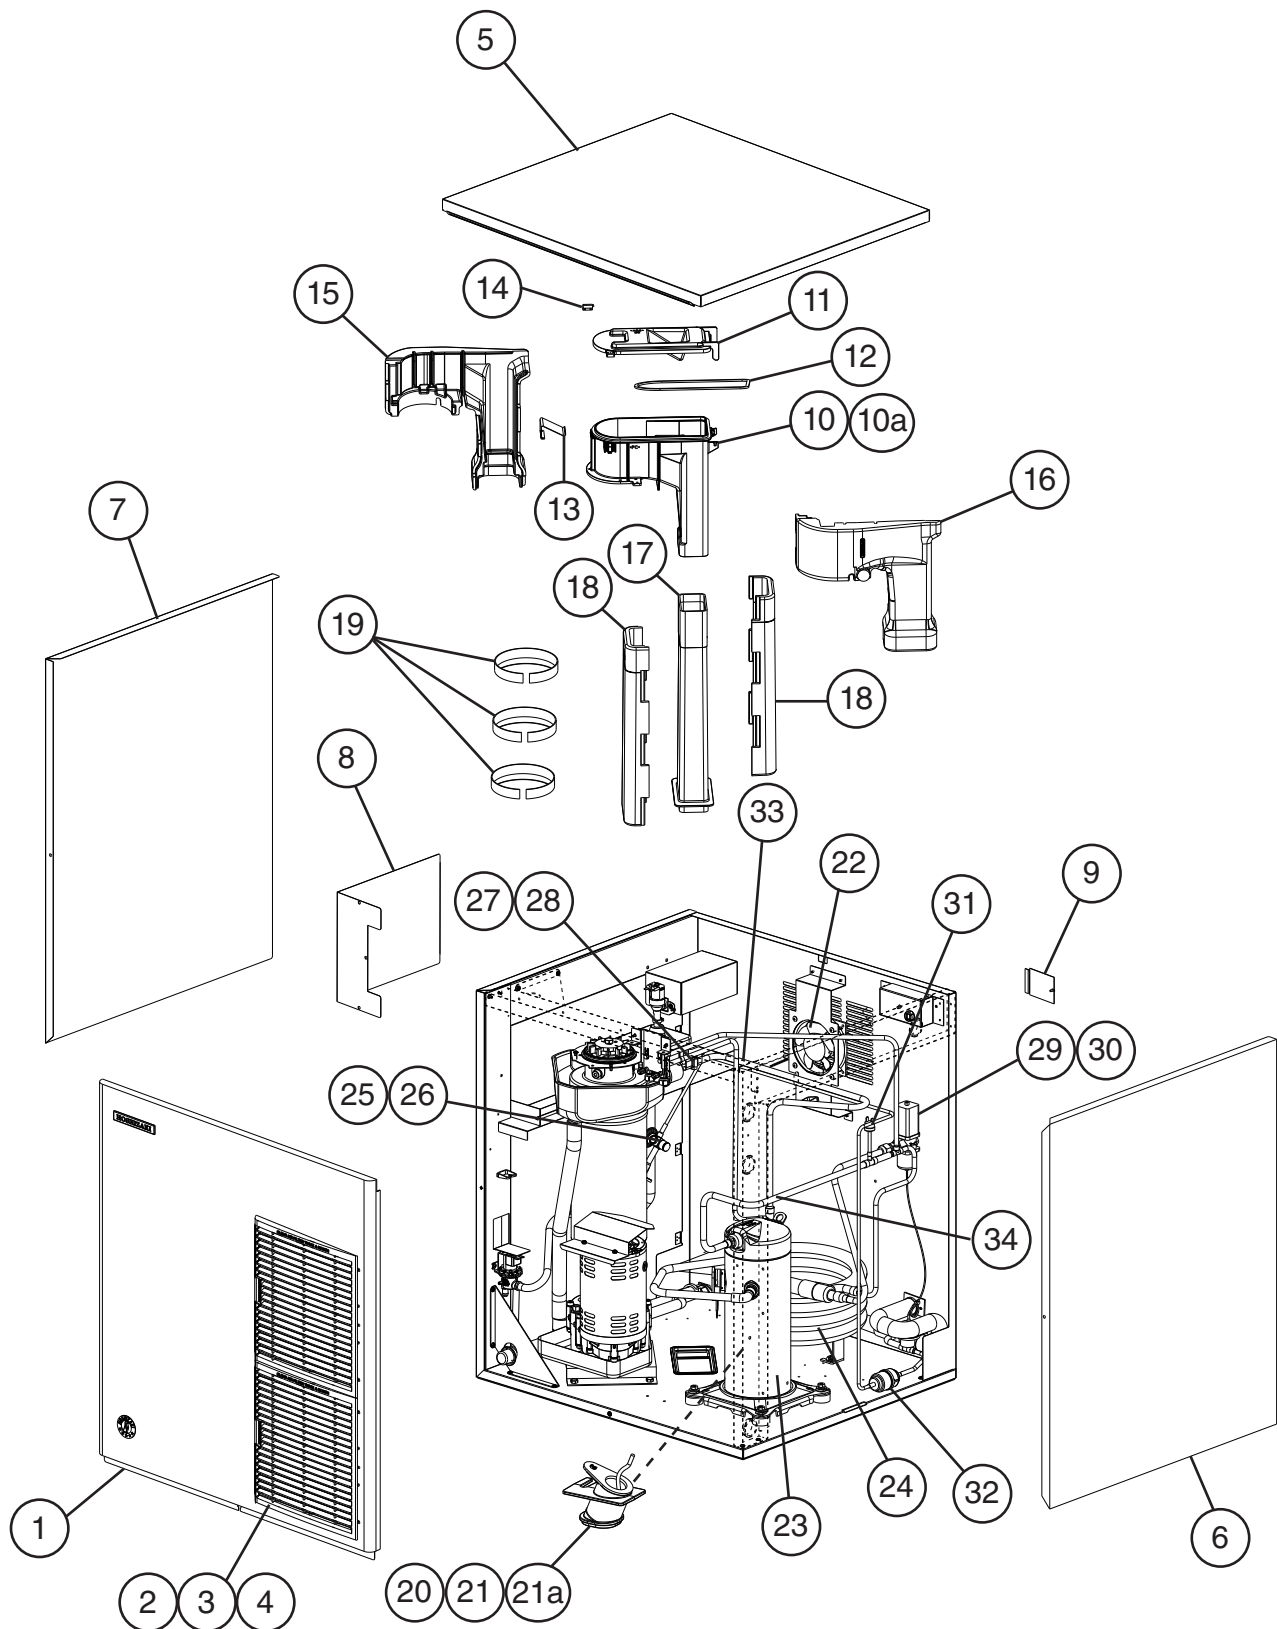

A. Main Assembly & Refrigeration Circuit
F-2030MWK2
2/2
 Q-0

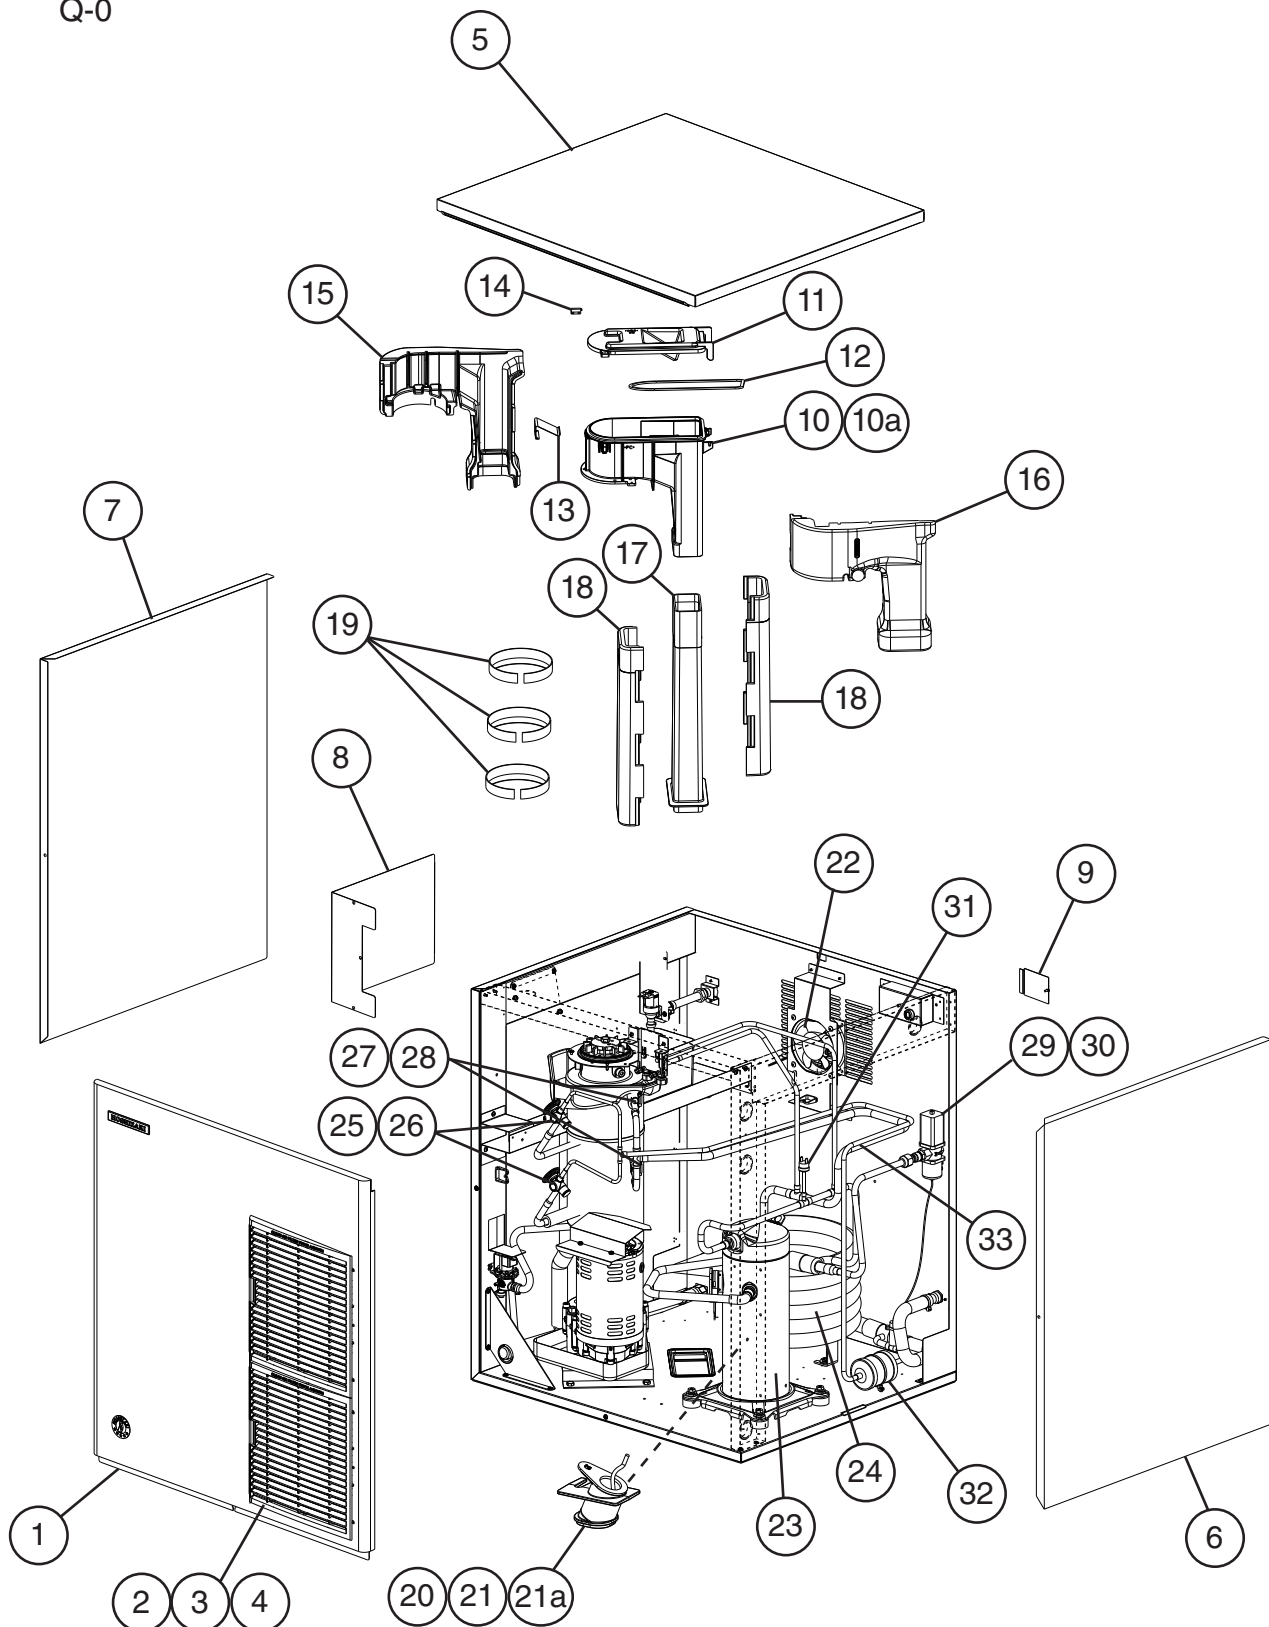


Title: A. Main Assembly & Refrigeration Circuit Model: F-1530MWK2(-C)(-SC), F-2030MWK2													
Index No.	Description	Material or Model Number	Part Number	Required Number									
				Q-0									
Main Assembly													
1	Front Panel Assembly (includes item 2)		1A6869A01	1									
2	Louver Assembly (includes items 3 and 4)		2A6649A01	2									
3	Louver		1A0547-01	2									
4	Air Filter		2A2062G01	2									
5	Top Panel		2A8088-01	1									
6	Right Side Panel		2A2077G01	1									
7	Left Side Panel		2A2076G01	1									
8	Control Box Cover		3B1324-01	1									
9	Junction Box Cover		433410-01	1									
10	Spout		122383P01	1									
10a	Truss Head Screw		7C32-0416	3									
11	Spout Cover		263888G01	1									
12	Gasket		421595-03	1									
13	Spout Spring		478013M01	1									
14	Bin Control Proximity Switch		P02940-01	1									
15	Spout Insulation A		3A9762-01	1									
16	Spout Insulation B		3A9763-01	1									
17	Chute		263897P02	1									
18	Chute Insulation		3B0065-01	2									
19	Insulation Strap (Tie)		436531G01	3									
20	Ultrasonic Bin Control		4A6148G01	1									
21	Ultrasonic Bin Control Housing		1A6270-01	1									
21a	Thumbscrew		415949G10	1									
22	Cabinet Fan		4A5343-01	1									
Refrigeration Circuit													
23	Compressor	F-1530MWK2(-C)(-SC)	4A7641-01	1									
		F-2030MWK2	4A7980-01	1									
24	Condenser	F-1530MWK2(-C)(-SC)	3A7236-01	1									
		F-2030MWK2	3A7324-01	1									
25	Thermostatic Expansion Valve	F-1530MWK2(-C)(-SC)	4A7589-01	1									
		F-2030MWK2		2									
26	Thermostatic Expansion Valve Cover	F-1530MWK2(-C)(-SC)	4A7679-01	1									
		F-2030MWK2		2									
27	Thermostatic Expansion Valve Bulb Holder	F-1530MWK2(-C)(-SC)	3A0112-01	1									
		F-2030MWK2		2									
28	Clamp		443461-01	1									
29	Water Regulating Valve		4A0911-08	1									
30	Male Connector		4A1087-01	1									
31	High-Pressure Switch		4A7070-05	1									
32	Drier	F-1530MWK2(-C)(-SC)	4A1113-01	1									
		F-2030MWK2	4A1338-01	1									
33	Heat Exchanger	F-1530MWK2(-C)(-SC)	3B2113G01	1									
		F-2030MWK2	3B2413G01	1									

A. Main Assembly & Refrigeration Circuit **F-1530MRKZ2(-C)(-SC)**

1/2


Q-0

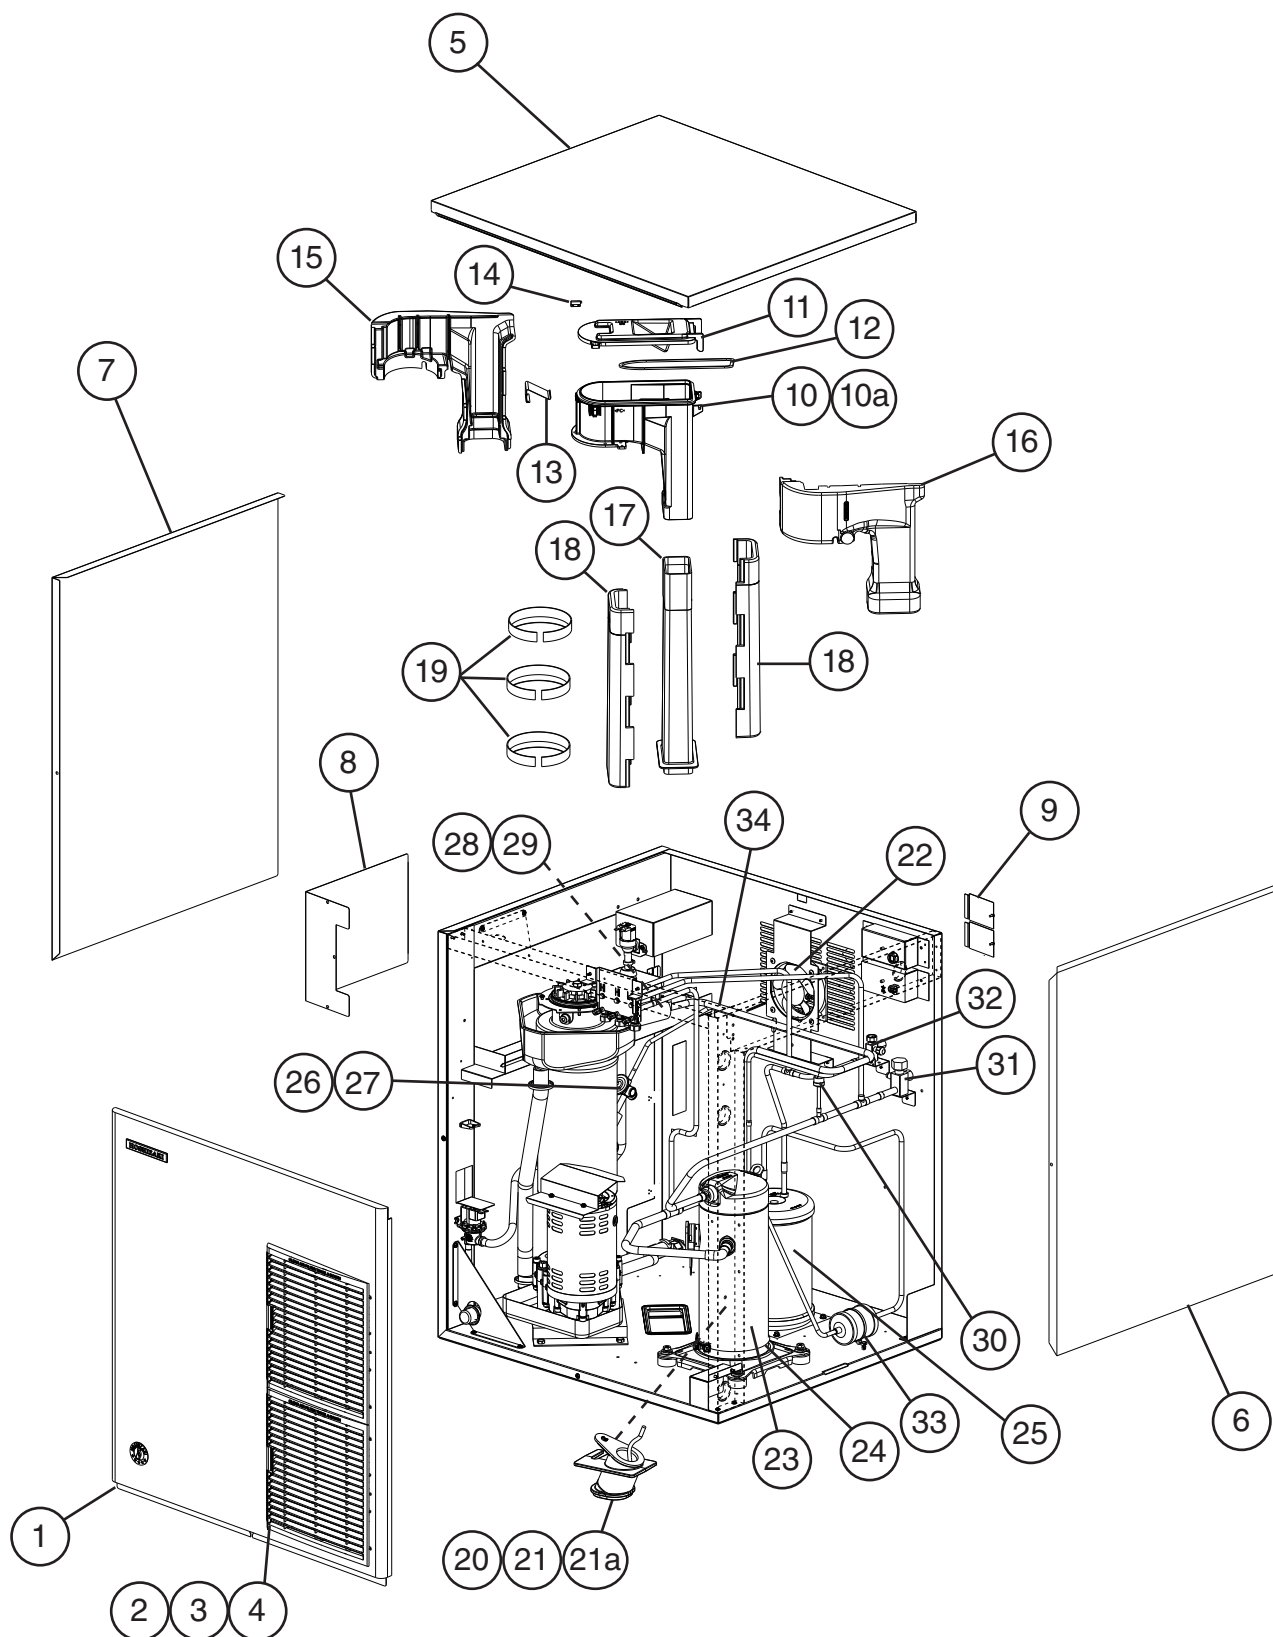

A. Main Assembly & Refrigeration Circuit **F-2030MRKZ3(-C)(-SC)**

2/2


TBD

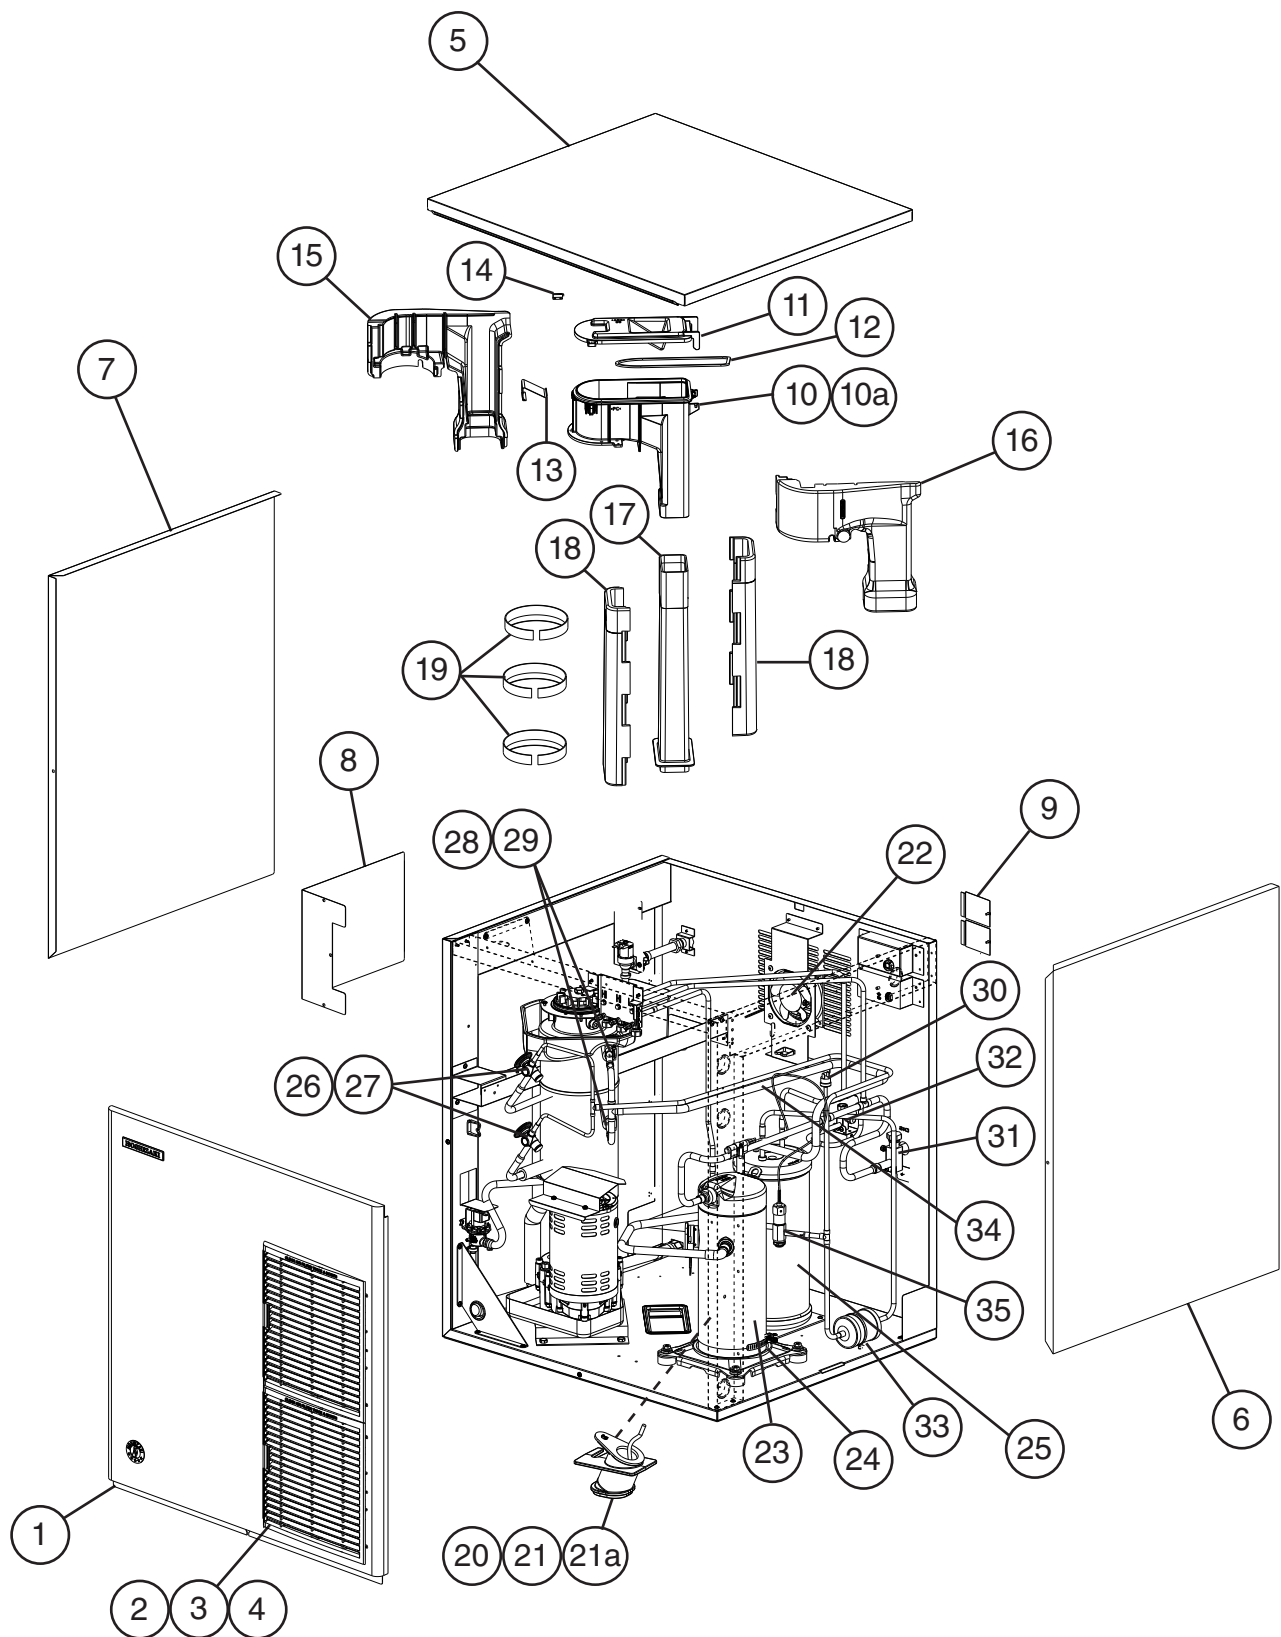

Title: A. Main Assembly & Refrigeration Circuit Model: F-1530MRKZ2(-C)(-SC), F-2030MRKZ2(3)(-C)												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0								
Main Assembly												
1	Front Panel Assembly (includes item 2)		1A6869A01	1								
2	Louver Assembly (includes items 3 and 4)		2A6649A01	1								
3	Louver		1A0547-01	2								
4	Air Filter		2A2062G01	2								
5	Top Panel		2A8088-01	2								
6	Right Side Panel		2A2077G01	1								
7	Left Side Panel		2A2076G01	1								
8	Control Box Cover		3B1324-01	1								
9	Junction Box Cover		433410-01	2								
10	Spout		122383P01	1								
10a	Truss Head Screw		7C32-0416	3								
11	Spout Cover		263888G01	1								
12	Gasket		421595-03	1								
13	Spout Spring		478013M01	1								
14	Bin Control Proximity Switch		P02940-01	1								
15	Spout Insulation A		3A9762-01	1								
16	Spout Insulation B		3A9763-01	1								
17	Chute		263897P02	1								
18	Chute Insulation		3B0065-01	2								
19	Insulation Strap (Tie)		436531G01	3								
20	Ultrasonic Bin Control		4A6148G01	1								
21	Ultrasonic Bin Control Housing		1A6270-01	1								
21a	Thumbscrew		415949G10	1								
22	Cabinet Fan		4A5343-01	1								
Refrigeration Circuit												
23	Compressor	F-1530MRKZ2(-C)(-SC)	4A7641-01	1								
		F-2030MRKZ2(3)(-C)	4A7980-01	1								
24	Crankcase Heater		4A5397-02	1								
25	Receiver	F-1530MRKZ2(-C)(-SC)	4A6213-01	1								
		F-2030MRKZ2(3)(-C)	4A6214-01	1								
26	Thermostatic Expansion Valve	F-1530MRKZ2(-C)(-SC)	4A7589-01	1								
		F-2030MRK(Z)2(3)(-C)		2								
27	Thermostatic Expansion Valve Cover	F-1530MRKZ2(-C)(-SC)	4A7679-01	1								
		F-2030MRK(Z)2(3)(-C)		2								
28	Thermostatic Expansion Valve Bulb Holder	F-1530MRKZ2(-C)(-SC)	3A0112-01	1								
		F-2030MRKZ2(3)(-C)		2								

Title: A. Main Assembly & Refrigeration Circuit Model: F-1530MRKZ2(-C)(-SC), F-2030MRKZ2(3)(-C)												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0								
29	Clamp	F-1530MRKZ2(-C)(-SC)	443461-01	1								
		F-2030MRK(Z)2(3)(-C)		2								
30	High-Pressure Switch		4A7070-04	1								
31	Discharge Line Service Valve	F-1530MRKZ2(-C)(-SC)	4A4822-01	1								
		F-2030MRKZ2(3)(-C)	4A3490-01	1								
32	Liquid Line Service Valve		4A3491-01	1								
33	Drier		4A1338-01	1								
34	Heat Exchanger	F-1530MRKZ2(-C)(-SC)	3B2066G01	1								
		F-2030MRKZ2(3)(-C)	1A8189G01	1								
35	Temperature Response Expansion Valve	F-2030MRKZ2(3)(-C)	4A7548-03	1								

A. Main Assembly & Refrigeration Circuit **F-2030MLKZ** TBD

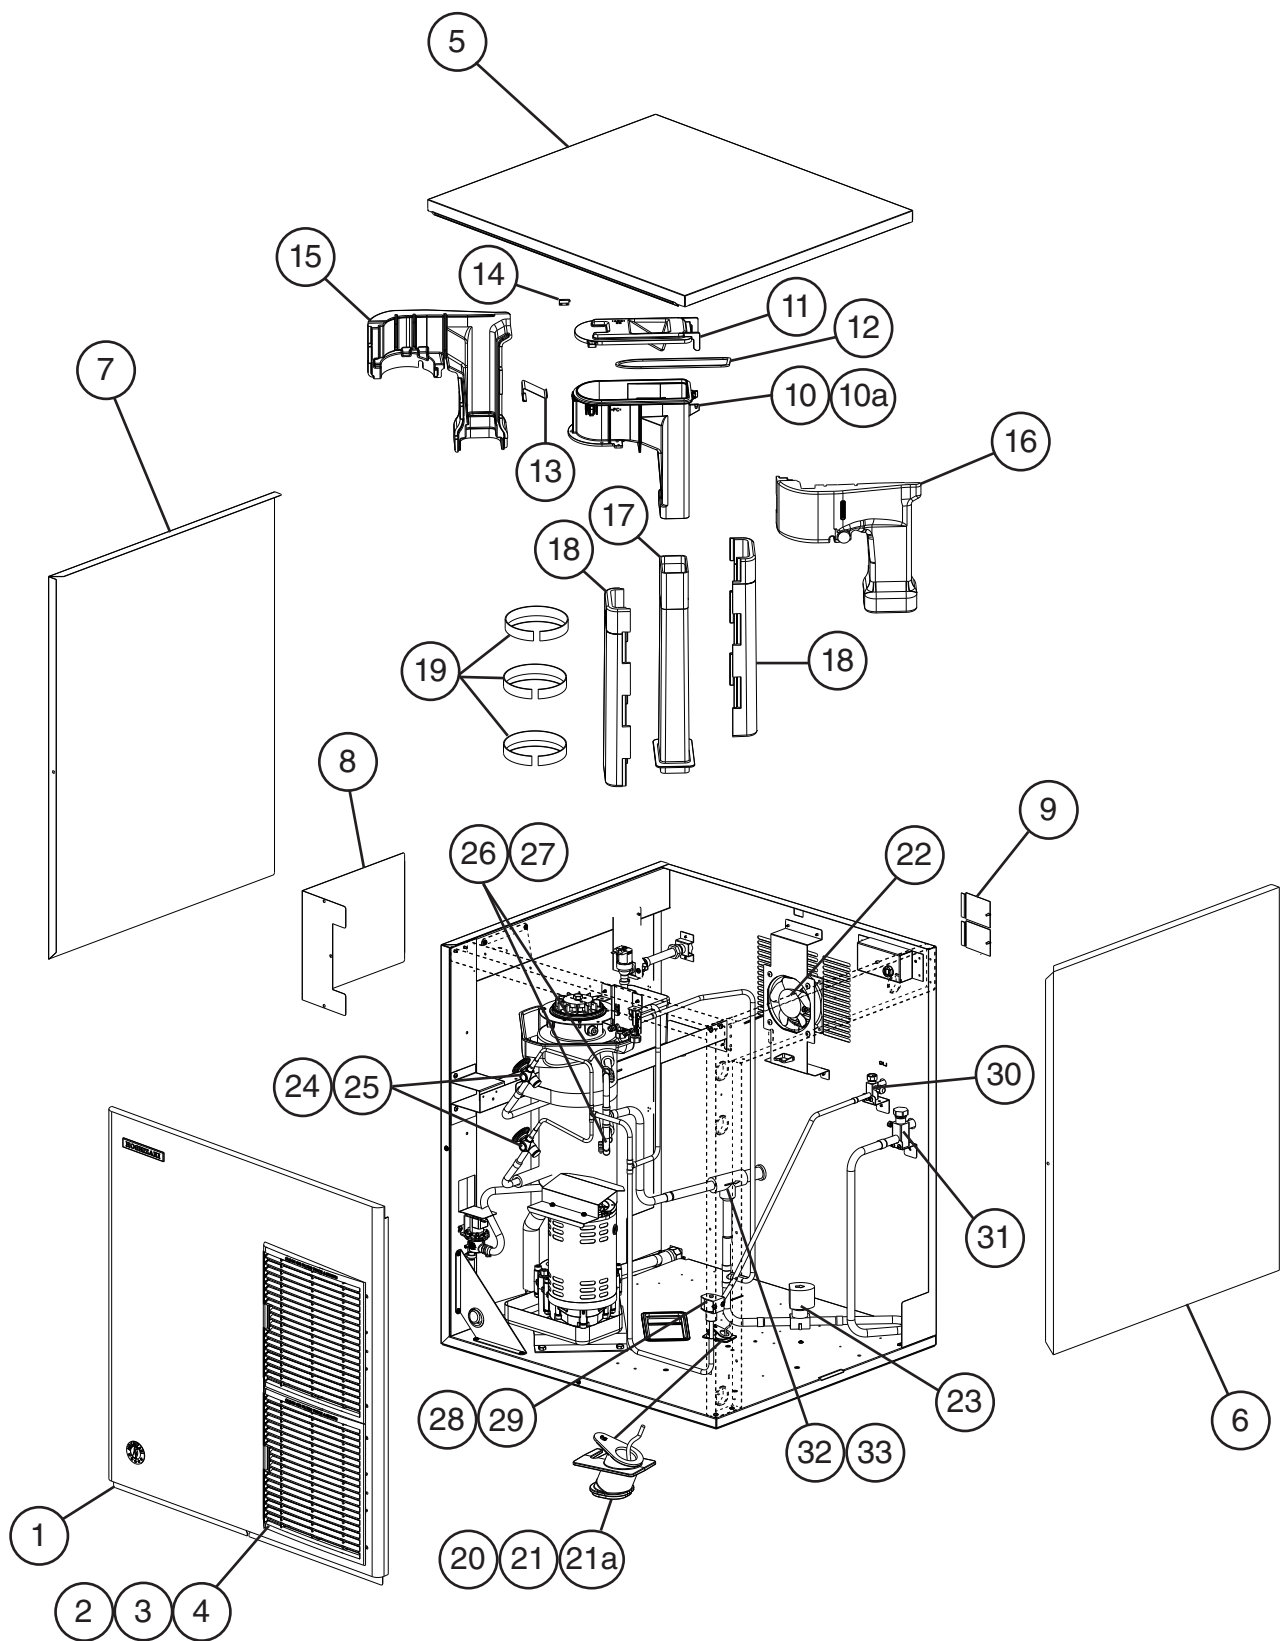


Title: A. Main Assembly & Refrigeration Circuit Model: F-2030MLKZ												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				TBD								
Main Assembly												
1	Front Panel Assembly (includes item 2)		1A6869A01	1								
2	Louver Assembly (includes items 3 and 4)		2A6649A01	1								
3	Louver		1A0547-01	2								
4	Air Filter		2A2062G01	2								
5	Top Panel		2A8088-01	2								
6	Right Side Panel		2A2077G01	1								
7	Left Side Panel		2A2076G01	1								
8	Control Box Cover		3B1324-01	1								
9	Junction Box Cover		433410-01	2								
10	Spout		122383P01	1								
10a	Truss Head Screw		7C32-0416	3								
11	Spout Cover		263888G01	1								
12	Gasket		421595-03	1								
13	Spout Spring		478013M01	1								
14	Bin Control Proximity Switch		P02940-01	1								
15	Spout Insulation A		3A9762-01	1								
16	Spout Insulation B		3A9763-01	1								
17	Chute		263897P02	1								
18	Chute Insulation		3B0065-01	2								
19	Insulation Strap (Tie)		436531G01	3								
20	Ultrasonic Bin Control		4A6148G01	1								
21	Ultrasonic Bin Control Housing		1A6270-01	1								
21a	Thumbscrew		415949G10	1								
22	Cabinet Fan		4A5343-01	1								
Refrigeration Circuit												
23	Solenoid Valve		446873-01	1								
24	Thermostatic Expansion Valve		4A7589-01	1								
25	Thermostatic Expansion Valve Cover		4A7679-01	1								
26	Thermostatic Expansion Valve		4A7589-01	1								
27	Thermostatic Expansion Valve Cover		4A7679-01	1								
28	Liquid Line Valve Body		4A3276-01	1								
29	Valve Coil		4A3277-01	1								
30	Liquid Line Service Valve		4A3490-01	1								
31	Discharge Line Service Valve		4A3491-01	1								
32	EPR Valve		4A1384-02	1								
33	EPR Valve Cover		340434-01	1								

B. Icemaking Unit

F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)

Q-0, R-0

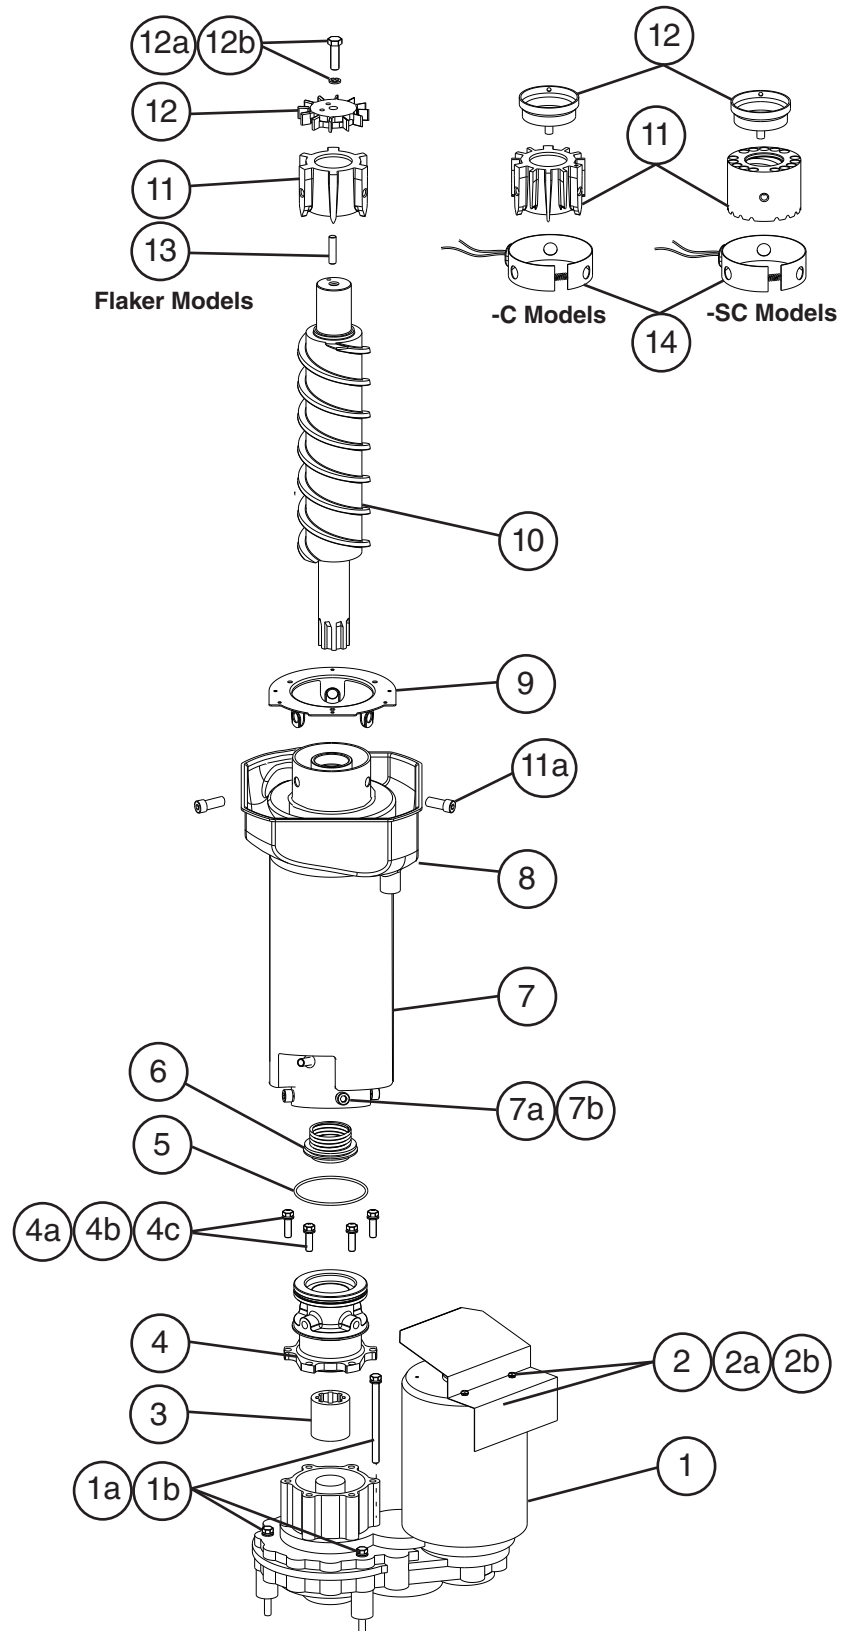


Title: B. Icemaking Unit Model: F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0 R-0								
1	Gear Motor		4A6947-01	1								
1a	Gear Motor Bolt		420600-02	3								
1b	Washer		7L22-1000	3								
2	Gear Motor Barrier		3B1436-01	1								
2a	Truss Head Screw	4x8	7C32-0408	2								
2b	Rubber Washer		4A5268-01	2								
3	Spline Coupling		420372-01	1								
4	Housing		206509G02	1								
4a	Hex Head Bolt	8x30	4A5640-01	6								
4b	Plain Washer		7W22-0800	6								
4c	Split Lock Washer		7L22-0800	6								
5	O-Ring		4A4755-04	1								
6	Mechanical Seal		432493-03	1								
7	Evaporator	F-1530M_K(Z)2(-C)(-SC)	2A7005G01	1								
		F-2030M_K(Z)2(3)(-C)	2A7028G01	1								
7a	Socket Head Cap Screw	8x12	4A7498-03	4								
7b	Split Lock Washer		7L22-0800	4								
8	Drip Pan		2A6885-01	1								
9	Flange		352714-01	1								
10	Auger		120864G02	1								
11	Extruding Head	F-1530M_K(Z)2 F-2030M_K(Z)2(3)	216407G02	1								
		F-1530M_K(Z)2-C	2B1120G01	1								
		F-1530M_K(Z)2-SC	3B0044G01	1								
11a	Seal Bolt		474757G02	3								
12	Cutter	F-1530M_K(Z)2 F-2030M_K(Z)2(3)	327026-01	1								
		F-1530M_K(Z)2-C(-SC)	315736G01	1								
12a	Hex Head Bolt	F-1530M_K(Z)2 F-2030M_K(Z)2(3)	7B02-1035	1								
12b	Split Lock Washer	F-1530M_K(Z)2 F-2030M_K(Z)2(3)	7L22-1000	1								
13	Dowel Pin	F-1530M_K(Z)2 F-2030M_K(Z)2(3)	713S-0526	1								
14	Evaporator Heater		4A4335-01	1								

C. Water Circuit

F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)

Q-0, R-0

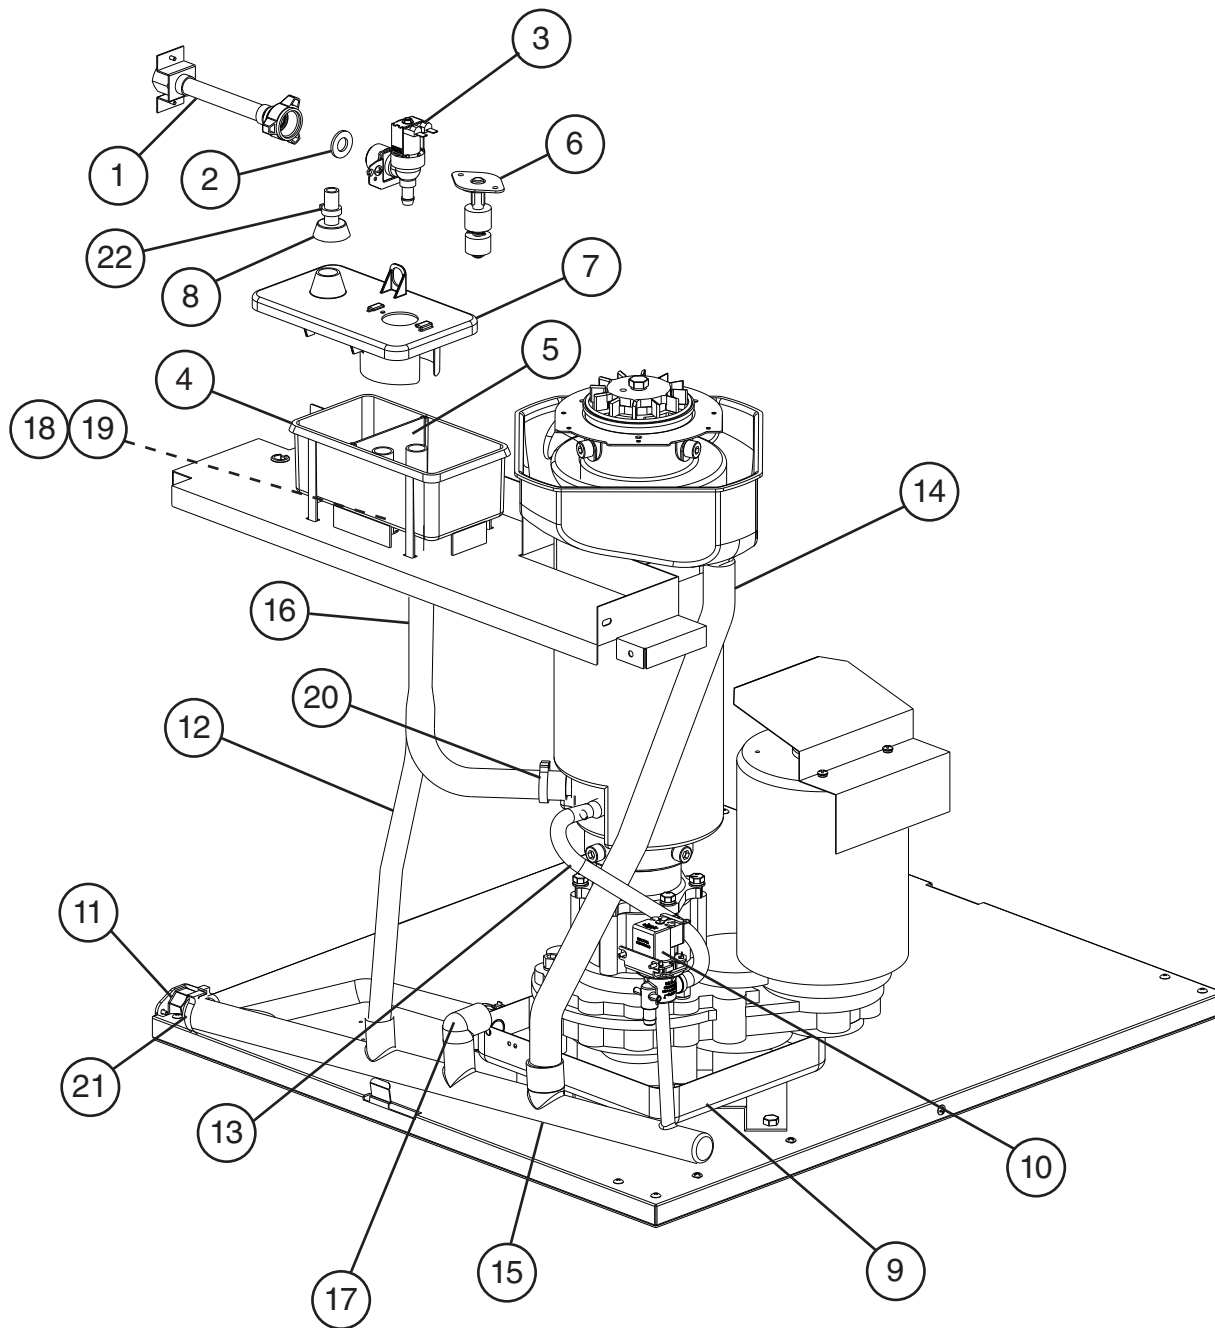


Title: C. Water Circuit Model: F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)													
Index No.	Description	Material or Number	Model	Part Number	Required Number								
					Q-0								
1	Water Supply Pipe			4A0891G02	1								
2	Rubber Gasket			413854-03	1								
3	Inlet Water Valve			4A5309-01	1								
4	Reservoir	F-1530M_K(Z)2(-C)(-SC)		2A0753-01	1								
		F-2030M_K(Z)2(-C)		208125-01	1								
5	Reservoir Separator			4A1255-01	1								
6	Float Switch			435490-01	1								
7	Reservoir Cover	F-1530M_K(Z)2(-C)(-SC)		214810-01	1								
		F-2030M_K(Z)2(-C)		208126-01	1								
8	Inlet Reservoir			4A0869-01	1								
9	Drain Pan			219358G01	1								
10	Drain Valve			4A2772-02	1								
11	Drain Fitting			4A5528-01	1								
12	Vinyl Hose (reservoir overflow)	L=510		7725B1923	1								
13	Silicone Hose (drain valve)	L=320		7730I3896	1								
14	Vinyl Hose (drip pan)	L=580		4A0658L01	1								
15	Drain Hose			3A7490-01	1								
16	Reservoir Hose (evaporator inlet)			428615-04	1								
17	Elbow			4A5624-01	1								
Clamps													
18	Hose Clamp			4A2017-01	1								
19	Hose Clamp			4A2017-06	1								
20	Hose Clamp			4A2017-02	1								
21	Hose Clamp			4A2017-03	1								
22	Hose Clamp			4A2017-08	1								

D. Control Box Assembly

F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)

Q-0, R-0

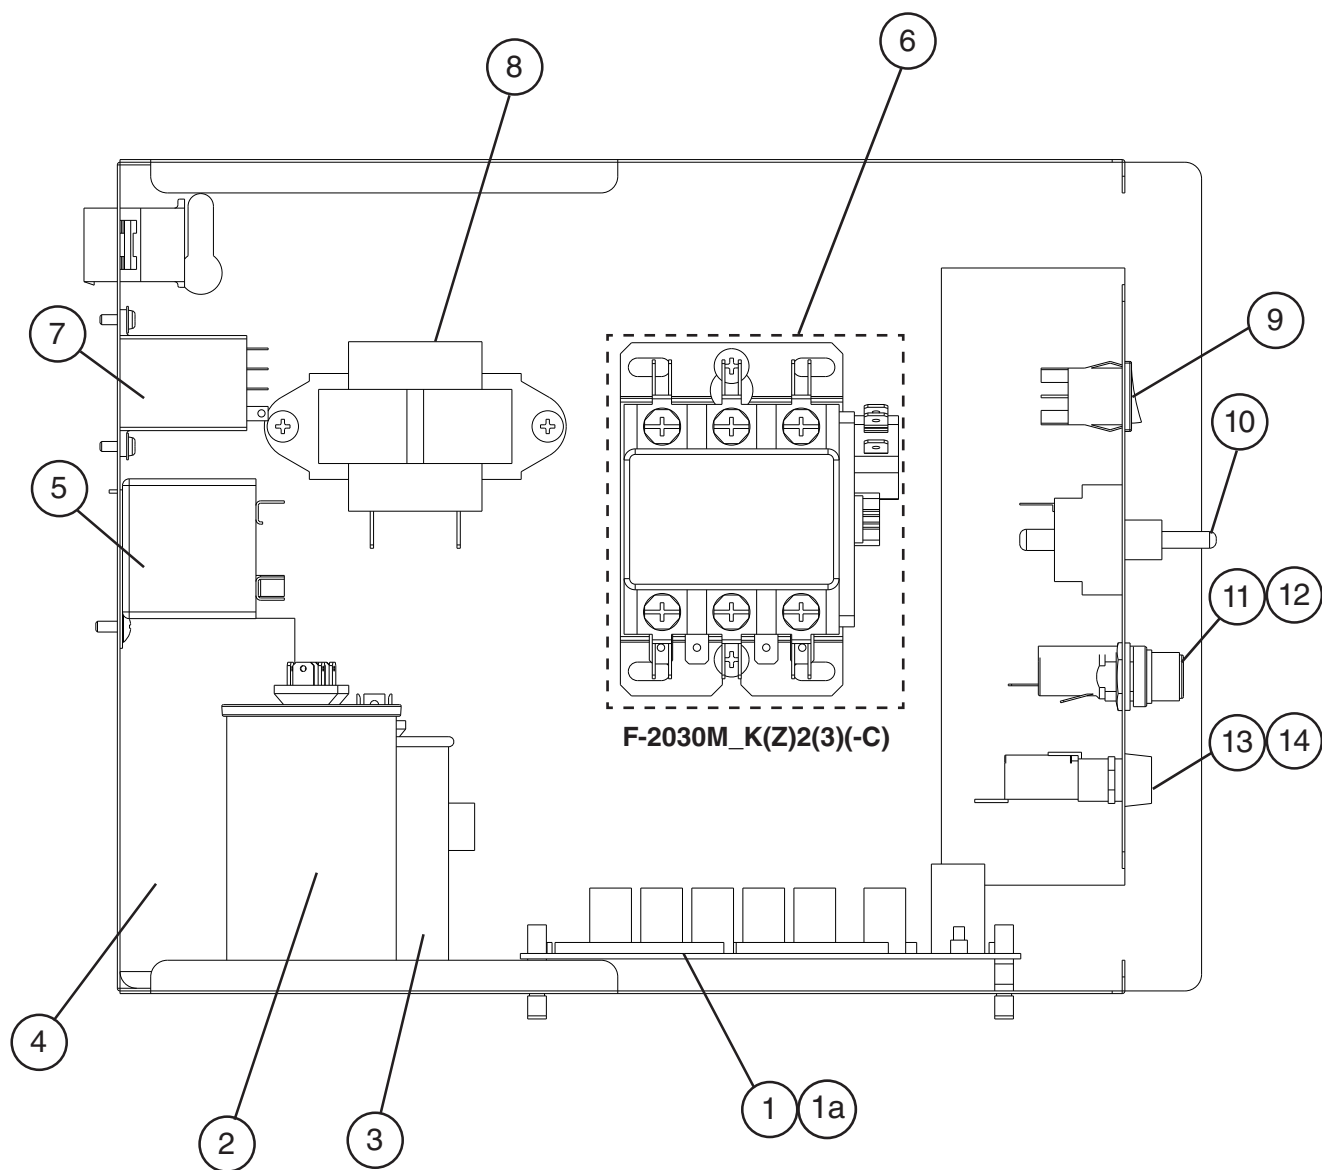


Title: D. Control Box Assembly Model: F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0 R-0								
1	Control Board		2A9874-03	1								
1a	Control Board Support		4A0336-03	4								
2	Gear Motor Capacitor	55MFD, 440VAC	3A2005-15	1								
3	Start Capacitor	88-106MFD, 330VAC	3A0076-07	1								
4	Run Capacitor	F-1530MAK2(-C)(-SC)	3A2005-13	1								
		F-1530MRKZ2(-C)(-SC)	3A2005-05	1								
		F-1530MWK2(-C)(-SC)										
		F-2030MWK2 F-2030MRKZ2(3)(-C)	3A2005-19	1								
5	Start Relay		4A1107-20	1								
6	Magnetic Contactor	F-2030MRKZ2(3)(-C)	4A0794-01	1								
		F-2030MWK2	4A0794-02	1								
7	Compressor Control Relay	115VAC	4A6558-01	1								
8	Control Transformer		4A0557-01	1								
9	Control Switch		4A0558-01	1								
10	Power Switch		4A2332-01	1								
11	Fuse Holder (Control)		4A5443-01	1								
12	Fuse (Control)	1A, 250VAC	4A0893-01	1								
13	Fuse Holder (Gear Motor)		4A6101-01	1								
14	Fuse (Gear Motor)	7A, 125VAC (Slow Blow)	4A3804-01	1								

E. Accessories & Labels

F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)

Q-0, R-0

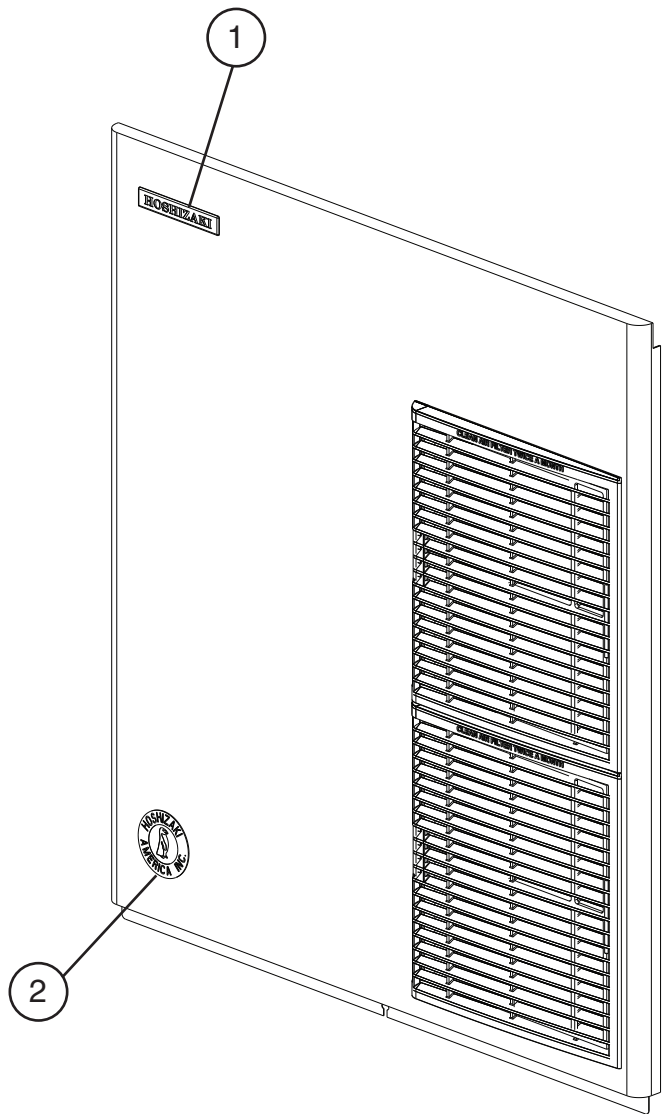

Title: E. Accessories & Labels Model: F-1530M_K(Z)2(-C)(-SC), F-2030M_K(Z)2(3)(-C)												
Index No.	Description	Material or Model Number	Part Number	Required Number								
				Q-0								
1	Hoshizaki Emblem Label		4A0560-01	1								
2	Penguin Label		475552L02	1								
3	Universal Brace		4A0363-01	2								
3a	Hex Head Bolt		7B02-0512	2								